

INSTRUCTION MANUAL

MODEL 869

**Portable
ppb Dissolved Oxygen Analyzer**



IC CONTROLS

Note: computer shown on front cover is not part of the 869 analyzer package. Computer equipment and software are supplied by customer.

GENERAL INFORMATION	3	SECURITY	32
Introduction	3	Password Security	32
Principles of Measurement	3	Access Levels	32
Principles of Calibration	4	Enabling Security	32
Sample Requirements	4	Entering a Password	33
 Description of Model 869 Analyzer	5	 INSTRUMENT MAINTENANCE	34
Mounting, Plumbing, and Wiring of Analyzer	6	Weekly Visual Check	34
Assembly of the Dissolved Oxygen Sensor	7	Monthly Calibration Check	34
 INSTRUMENT OPERATION	8	Yearly Maintenance	34
Description of Basic Unit Controls	8	Cleaning the 869 housing	34
Menu picture	9	Assembly of the Dissolved Oxygen Sensor	35
869 Set-Up and Operation	11	Re-Inserting the Sensor into the Flowcell	35
“Easy to use” Menu	11	Recommended Supplies	35
Arrow Keys	12	 TROUBLESHOOTING	36
Edit Mode	12	Error Messages and Codes	36
Metric or Imperial Units	13	Error Messages for Dissolved Oxygen	36
Real-Time Clock	13	Error Messages for Temperature	37
Error Messages	14	Error Messages for Pressure	37
Shutdown and Start-up Procedure	15	Dissolved Oxygen Tips	38
Standby Mode	15	Error Messages for Battery	38
Battery Operation	15	DO Sensor Chemical Cleaning	39
Voltage Output Signal	16	 REPAIR AND SERVICE	40
RS232 COMMUNICATIONS	18	NOTICE OF COMPLIANCE	41
Example: Windows 3.1 Terminal Program	19	INDUSTRIAL PRODUCTS WARRANTY	42
Example: Windows 95/98/NT Hyperterminal	19	APPENDIX A: PARTS LIST	43
Example: Load Log File in Excel	20	APPENDIX B: DEFAULT SETTINGS	44
Example: Load Log File in Quattro Pro	20	APPENDIX C: SATURATED DO VALUES	45
 Grab Sample Measurements	22	APPENDIX D: DISPLAY PROMPTS	46
Data Logging	24	APPENDIX E: RESETTING COMPUTER	47
Automatic Logging	24	APPENDIX F: UNIT CONVERSION	48
Internal Data Logging	25	APPENDIX G: ELECTRONIC ALIGNMENT	49
 System Event Tags	27	Electronic Hardware	49
 869 CALIBRATION	28	 APPENDIX H DRAWINGS	51
Removal of the Dissolved Oxygen Sensor	28	Wiring Diagram	51
Calibration Procedure	28	Mounting Dimensions	52
Inserting the Sensor into the Flowcell	29	 APPENDIX I: SPECIFICATIONS	53
Output Hold during Cal.	29	INDEX	54
Zero Testing the DO Sensor	29		
Temperature Compensation	30		
Barometric Pressure Compensation	30		
Range: Automatic (or Manual)?	31		

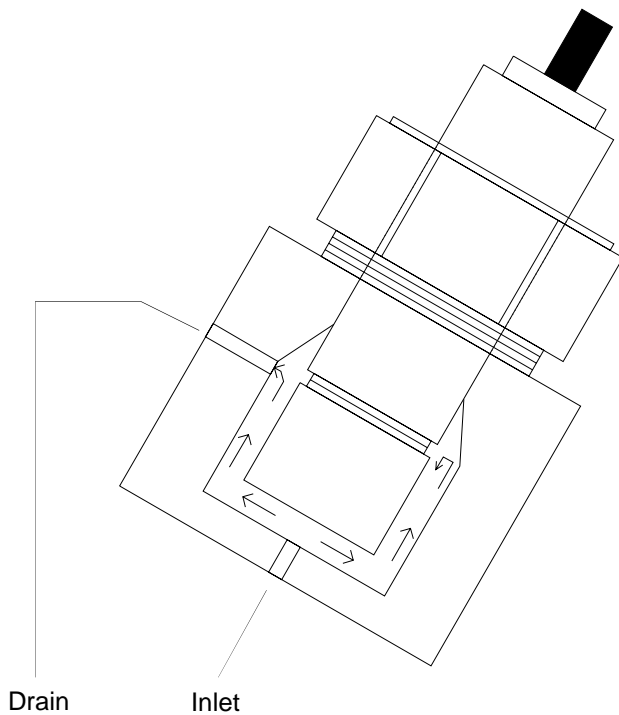


Figure 1 Block Diagram of Sample Flow

Note:

Angle mounting is recommended to encourage any bubbles in the sample to rise to the exit and be swept to drain.

Note:

Additional sample stream components are recommended where high pressure or entrained solids may be encountered. A bypass filter helps to protect the electrode membrane, extending its lifetime, by bypassing some rust and other solids to drain.

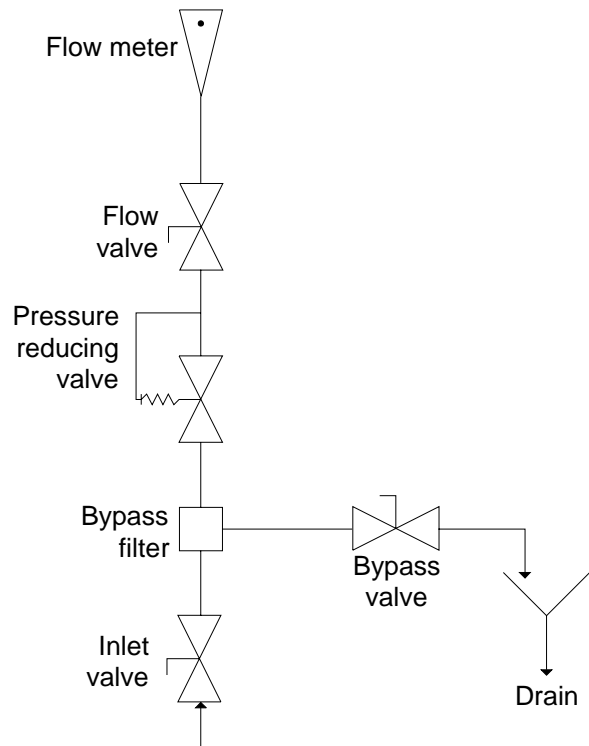


Figure 2 Optional: Dirty and Pressure Applications

GENERAL INFORMATION

Introduction

Dissolved oxygen is a measure of the amount of oxygen, usually thought of as a gas, that is dissolved in a liquid such as water. Oxygen is essential to life and is the most common element found taking part in corrosion reactions. It is this corrosion reaction that provides the main need for the 869 Dissolved Oxygen Analyzer, which is designed to run normally at low part per billion (ppb) levels.

Mechanically hard and porous metal oxide deposits have little strength and form rapidly in the presence of water and oxygen. Rapid corrosion will occur inside an industrial utility boiler system unless dissolved oxygen can be virtually eliminated. Corrosion results in expensive repairs or equipment failures and subsequent replacement.

The 869 is designed to measure the oxygen in flowing boiler water samples. The operating range of 1 ppb to 10 ppm allows measurement of samples from condensers, valves and fittings, with low level precision to show the performance of oxygen removal equipment and chemical scavengers. Designed for portable use with quick disconnects for flowing sample hookup, to minimize oxygen inleakage to the sample, plus sample results logging capability. Other considerations include an easy-to-use, simple and accurate calibration approach, and capability to communicate with RS 232 to download logging results to your computer.

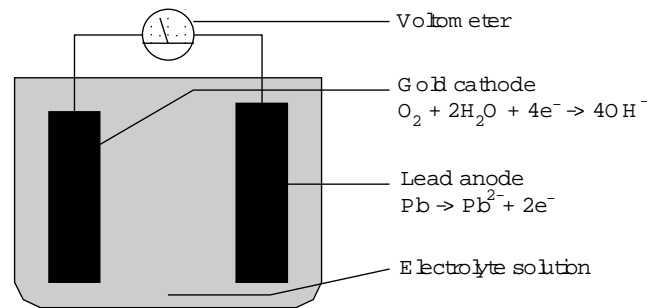


Figure 4 Basic Galvanic Cell

Principles of Measurement

The 869 trace dissolved oxygen measuring sensor is an electrochemical cell similar to a battery that produces a current when oxygen is present. By using carefully selected electrodes, in contact with an appropriate electrolyte, a chemical reaction occurs that uses electrons gained from oxygen molecules to produce a galvanic current directly proportional to the concentration of oxygen present. Also, unlike an electrolytic cell in which a flow of current produces the chemical reaction, there is no zero-current as galvanic

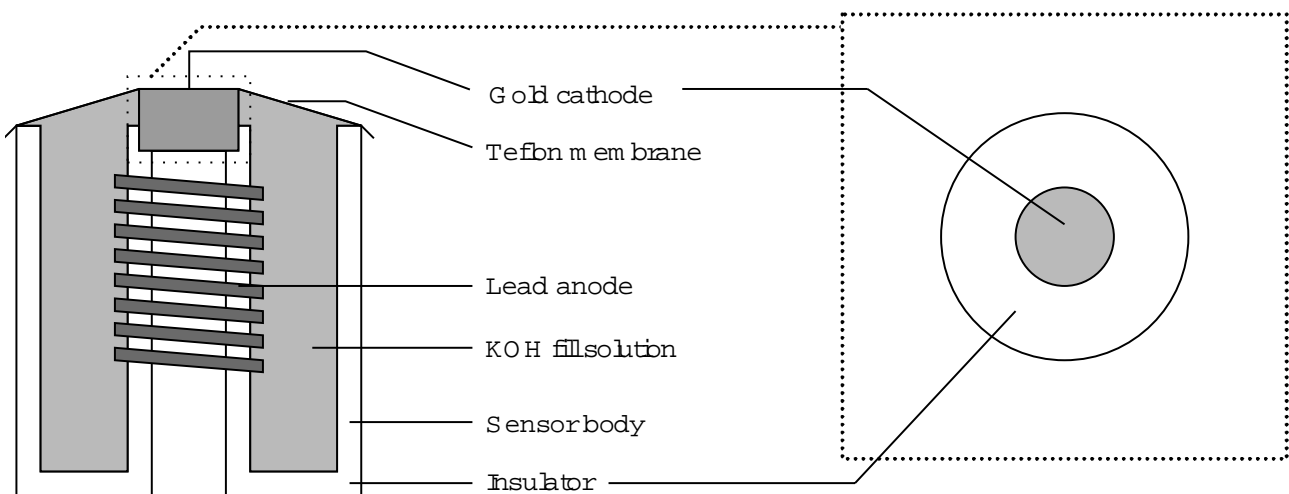


Figure 3 Galvanic Dissolved Oxygen Sensor

current naturally is zero when zero oxygen is present. This is a big advantage for trace ppb level operation.

The 869 uses a galvanic cell separated from the sample by an oxygen permeable PTFE membrane. The cell has a gold cathode in close contact with the PTFE membrane where oxygen gains electrons (is reduced) to become hydroxyl ions, and a lead anode that produces a fixed potential regardless of oxygen concentration, to complete the circuit.

The chemical reactions within the cell are;

At the cathode: $O_2 + 2H_2O + 4e^- = 4OH^-$

At the anode: $2Pb = 2Pb^{2+} + 4e^-$

Overall: $O_2 + 2H_2O + 2Pb = 2Pb_2OH.$

The advanced electrode design permits fast and accurate measurements on both rising and falling dissolved oxygen.

Principles of Calibration

At any given temperature and barometric pressure the partial pressure of oxygen in water-saturated air is exactly the same as it is in air-saturated water. Thus a sensor can be calibrated in water-saturated air, using the 20.9 % oxygen available in air as the full-scale standard, and it will correctly read dissolved oxygen in water samples. Both temperature and barometric pressure affect the partial pressure of oxygen in air saturated with water vapor. The 869 has microprocessor memory programmed with all the values, as well as automatic temperature and barometric pressure sensors, so it can automatically obtain the correct data, look up the dissolved oxygen table, compute the correct gain, and calibrate the analyzer. The operator need only remove the cell and suspend it over a beaker of water. This calibration technique will give a 100 % saturation reading for the temperature and pressure which the 869 will display as ppm dissolved oxygen.

To calibrate the sensor, simply suspend the probe above water and let the analyzer auto calibrate.

Sample Requirements

The IC CONTROLS ppb dissolved oxygen sensor has been designed to give fast stable readings at low levels of dissolved oxygen. The sensor is able to return to service quickly after sample interruptions, such as are encountered on portable multiple sample applications.

Sample inlet connection - recommended sample delivery tubing is 316SS with quality tube fittings to eliminate diffusion of oxygen through the sample system tube walls and leaks at fittings. Use of clear flexible PVC sample tubing for easy sample hook-up is acceptable but may result in longer rinse down times and /or leaks. These phenomena show up as slow downward drift and/or a higher than expected low DO reading.

Upstream sample system components should have as few components and/or chambers as possible to limit dissolved oxygen hideout locations with accompanying long rinse down times. However, if the sample will contain rust etc., or hydrocarbons, a filter should be installed upstream in the sample delivery system to protect the membrane from puncture. See **Figure 2**.

Flow rate - 100-200 mL/min recommended. Lower sample flows will result in slower response to ppb dissolved oxygen changes.

Temperature - Sample should be cooled to between 10 and 35°C, maximum 45°C, minimum + 1°C. Hotter samples to 90°C can be measured with special sensors.

Pressure - should be low, as the flowcell effluent should discharge to atmospheric drain. Sample supply at 5 to 15 PSIG works well and with 100 to 200 mL/min flow the sensor exhibits no response to flow changes. With low supply pressure, the large nut on the flowcell can be hand tightened to provide an airtight seal.

Description of Model 869 Analyzer

Numbers in the description refer to **Figure 5**

Dissolved oxygen sensor and lead (1) - senses ppb oxygen in sample stream and produces a current dependent on sample concentrations. Equipped with attached 2 ft. cable, with internal shield and double shielded cable for stable low ppb signals. Contact IC CONTROLS for customized cable lengths up to 30 feet.

Hand seal gland nut (2) - provides easy removal of sensor and pressure seal.

CPVC flow cell (3) - contains dissolved oxygen sensor, stainless steel sample delivery and close contact sample flow path.

O-Ring seal (4) - inlet fitting, special 1/4" tube fitting to provide oxygen-tight inlet seal.

mounting bracket (5) - securely mounts flowcell at 60 degrees from horizontal to easily let bubbles pass.

RS 232 Connector (6) - enables hookup of 869 to your computer for data exchange.

869 Dissolved Oxygen Analyzer electronics (7) - handles all signal manipulation, results, digital logging of samples and computer communications.

LED display (8) - provides digital readout of concentration, temperature, error codes, etc.

Keypad (9) - consists of scroll keys; mode keys: sample, cal, and error.

AC power adaptor jack (10) - connects DC output of AC adapter to electronics for battery recharge or continuous service.

ON-OFF Switch (11) - turns the 869 electronics on or off.

Output (12) - the 869 0 to 1 VDC output lead access.

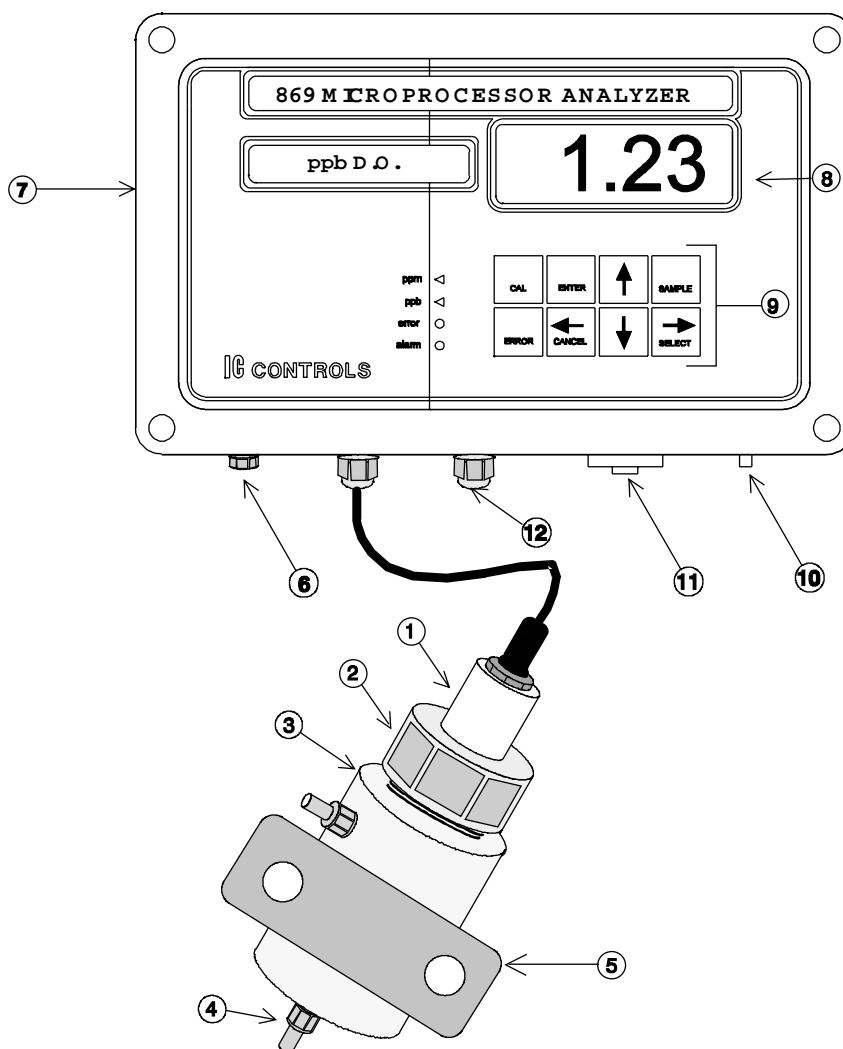


Figure 5 Major Components of Dissolved Oxygen Monitor

Mounting, Plumbing, and Wiring of Analyzer

The 869 comes pre-mounted on a stand for portable use with necessary plumbing to the sensor and quick disconnects for easy use. Nominal input power for the 869 microprocessor analyzer is two 9V DC batteries. Also included is an AC power adapter for 115/230 VAC $\pm 10\%$, single phase 50/60 Hz. The AC power adapter automatically adjusts to either 115 or 230 VAC. The power input jack is located on the bottom right of the 869 housing. An ON-OFF switch is located beside the power jack.

There is a 0.5 inch liquid tight cable connector in the bottom of the instrument enclosure for the sensor and a second for the 0 to 1V DC output.

The basic wiring scheme for all IC CONTROLS sensors is shown in **Figure 6**. The sensor at 1 ppb dissolved oxygen produces less than 1 microamp. It is recommended that the sensor be located as near as possible to the dissolved oxygen transmitter to

minimize any effects of ambient electrical noise interference. The portable configuration with 2 foot sensor cable easily meets this requirement.

For alarm, RS232, or output wiring see the alarm, serial communications, or output section.

Flowcell Mounting

1. There are mounting clamps around the body of the cell, held in by socket head cap screws.
2. The flowcell is arranged for up-flow to the inlet at the bottom, with the cell at an angle from vertical. This up-flow arrangement will encourage entrained bubbles in the sample flow to pass through the sample system with minimum dissolved oxygen upset. Ensure the O-ring seal fitting at the cell inlet is fully sealed and no oxygen in leakage is occurring.

Note: Over tightening this fitting may deform plastic parts, causing air leaks and erratic readings.

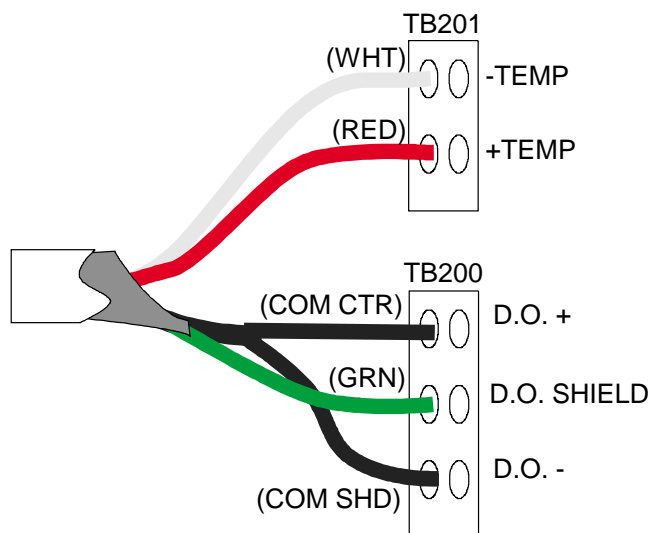


Figure 6 Sensor wiring



AC power adapter

Assembly of the Dissolved Oxygen Sensor

This procedure should be done over a sink. Wear thin plastic or rubber gloves as the electrolyte is a caustic solution. Wash hands thoroughly with lots of water if the electrolyte comes in contact with the skin. Rinse until the slippery feel of the caustic disappears.

1. Remove the protective cap exposing the coils and silver tip. Inspect the electrode to ensure the coils are clean and the silver electrodes are bright and not tarnished. If tarnished, wipe in the direction of the coils with a lint free paper towel.

Note: Ensure brown 'O'-ring is mounted against ledge in cap before membrane is installed.

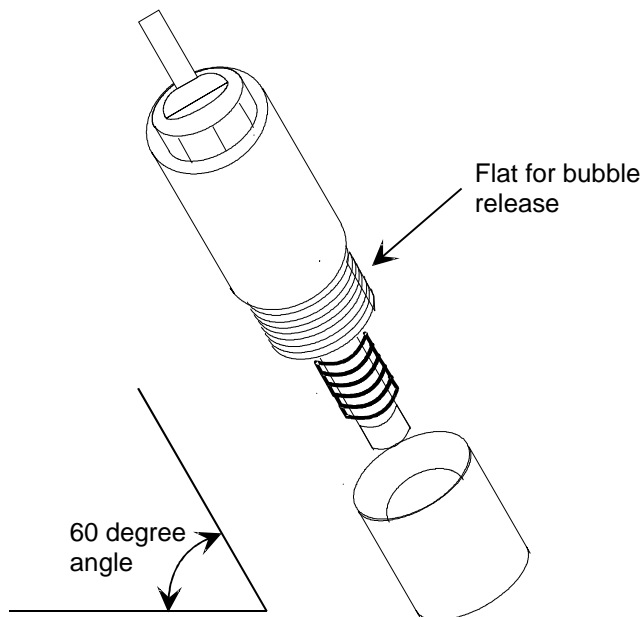


Figure 7 D.O.cell assembly

2. Install a membrane module in the cap with the membrane facing down so that it covers the open end of the cap.
3. Flush the coils of the electrode with electrolyte solution. Then holding the electrode cap with

membrane module installed, in an upright position, fill with electrolyte until the center cavity is full. Tilt at about 60° and add an extra 1/8 inch of electrolyte, observing that the crack around the membrane module fills with electrolyte.

4. Hold the cap like a cup, and slowly lower the electrode coils vertically down into the cap until the threads touch. Rotate the sensor body until you can see the flat area through the threads. Slowly rotate the cap on, allowing the excess electrolyte and bubbles to overflow up the flat. Continue to slowly rotate the cap until a firm stop is reached.

Warning: Do not force the cap beyond the stop. The parts are plastic and may break.

5. Dry the sensor and blot the tip. Examine the tip—the membrane should be smooth with no wrinkles or cuts and the surface contours of the silver electrode should be clear. There should be no lines from trapped bubbles between the membrane and the silver electrode. If there are no visible problems as described here, then the sensor is ready to be put into service.

Inserting the Sensor into the Flowcell

1. Inspect the inside of the flowcell for any foreign matter and wipe out if necessary. It should appear clean and clear.
2. Insert the assembled sensor through the nut and seal ring. Rock back and forth to pass the O'ring.
3. Press slowly all the way down until the sensor firmly contacts the flowcell bottom.
4. By hand, tighten the nut firmly to get a good seal. This should be good for 15 to 90 psig.

Warning: Do not use a large wrench to tighten the nut. The plastic parts could be broken or deformed.

INSTRUMENT OPERATION

Description of Basic Unit Controls

LCD display - Displays four-and-one-half digit and plus/minus sign used to read dissolved oxygen concentration, temperature, error messages, logged data, as well as the entire menu used to control the analyzer.

Up and Down arrow keys - Moves up and down in the menu. In edit mode, adjusts blinking digit or selects an item from the list. Refer to description of edit mode.

Cancel/left arrow key - Moves left in the menu. In edit mode, moves left one digit or cancels edit. Refer to description of edit mode.

Select/right arrow key - Moves right in the menu. In edit mode, moves right one digit. Refer to description of edit mode.

Enter key - Enters edit mode when displaying an editable value. In edit mode, accepts the displayed setting. Refer to description of edit mode.

Sample key - From anywhere in the menu, press the sample key to return to displaying the dissolved oxygen measurement.

Cal key - From anywhere in the menu, starts the 869 analyzer into calibrate mode.

Error key - If flashing ERR shows in display, then pressing the error key causes the LCD to display an error code. If no error condition has been encountered, the LCD will show [NONE].

LED's - Not implemented in the portable version of the ppb D.O. analyzer to conserve battery life.

ppm ◁
ppb ◁
error ○
alarm ○

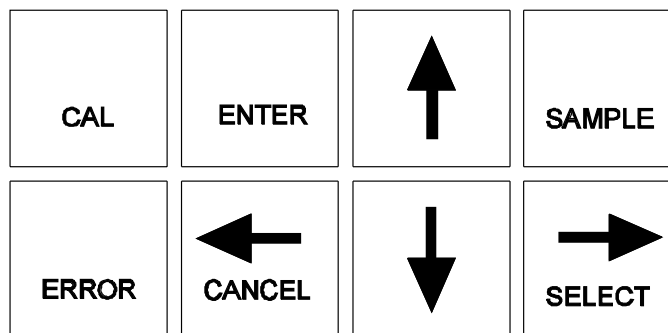


Figure 8 Front panel keypad

Menu picture


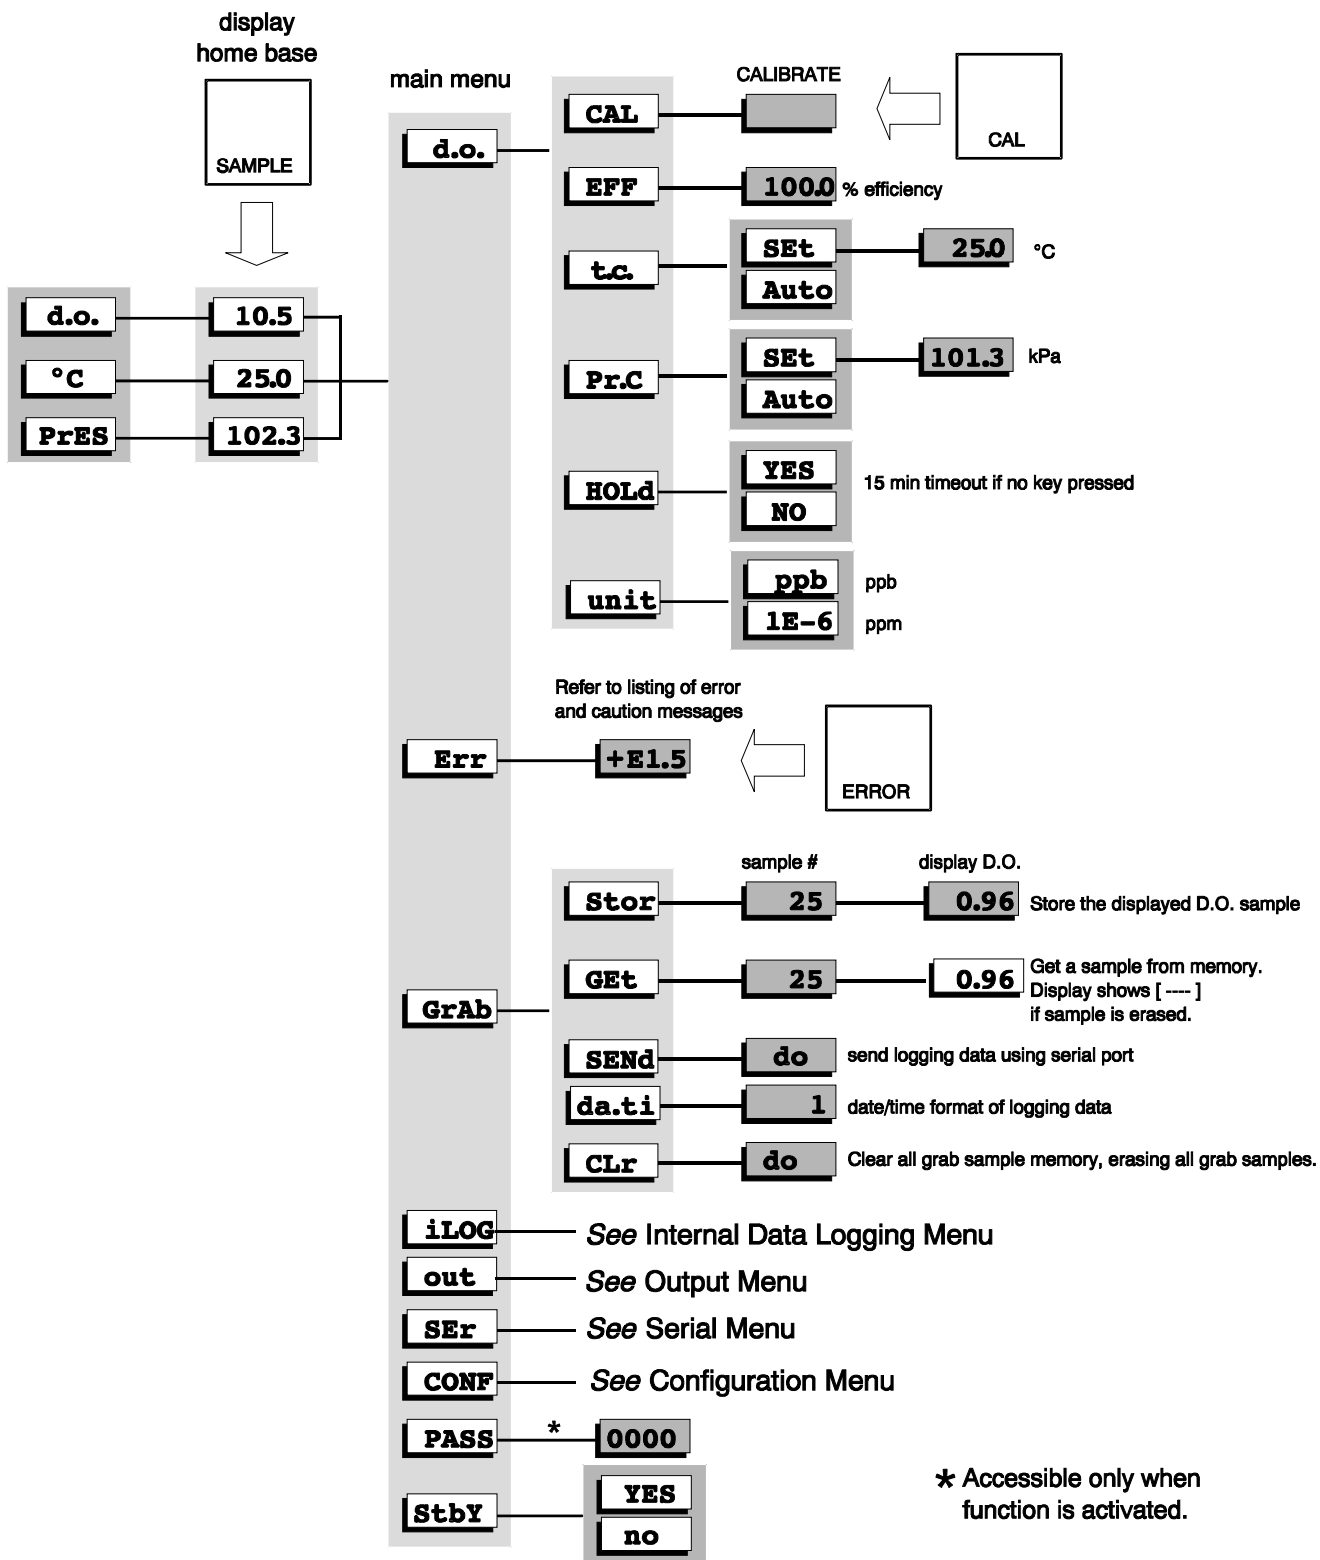


Figure 9 Main menu

INSTRUMENT OPERATION

Internal data log menu, when not logging

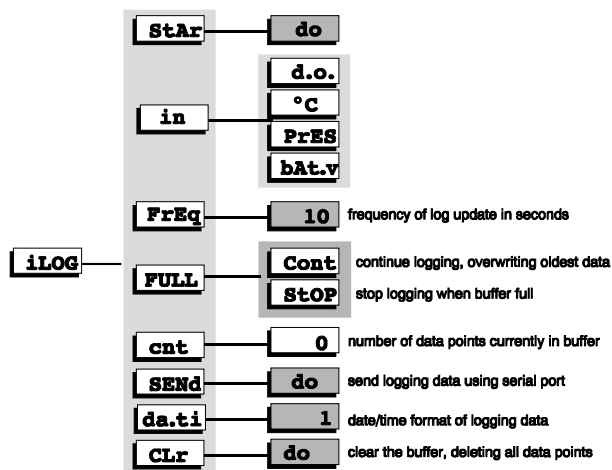

Internal data log menu, while logging

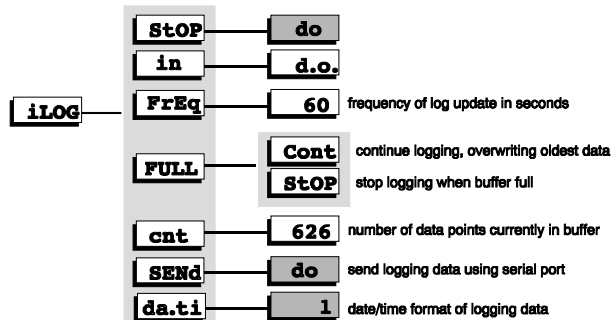


Figure 10 Internal data logging menu

IC CONTROLS

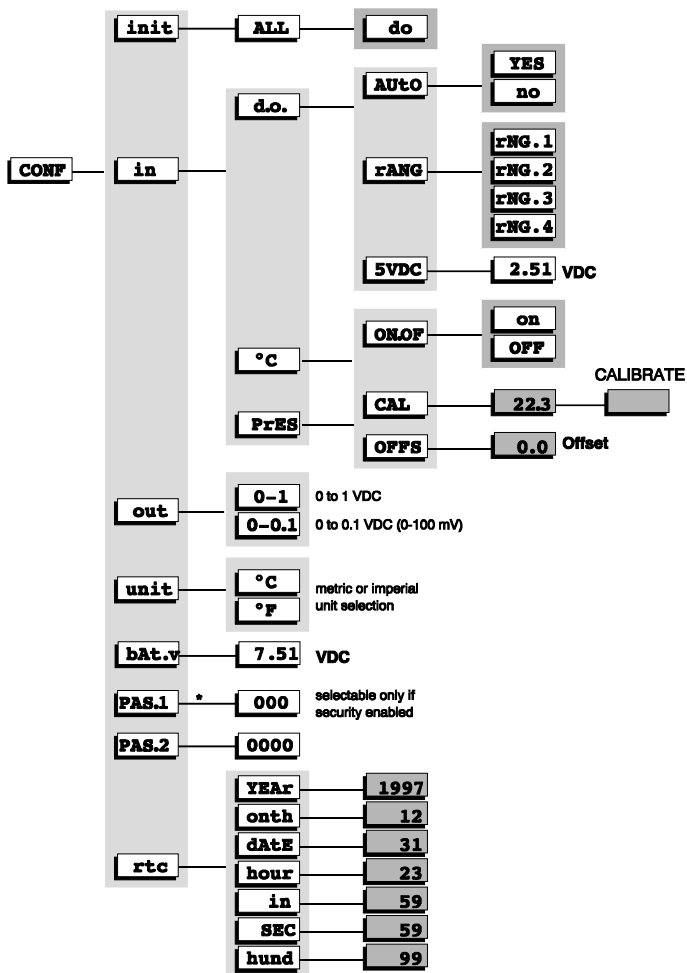


Figure 12 Configuration menu

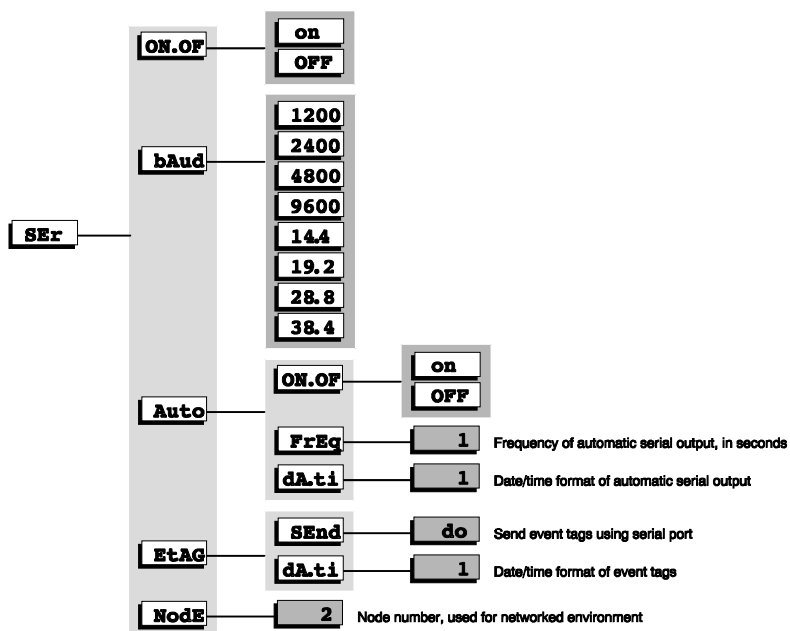


Figure 13 Serial communications menu

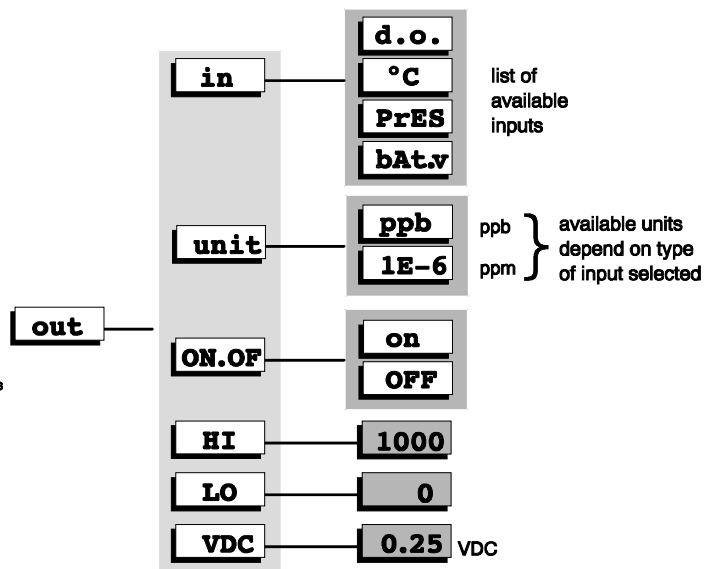


Figure 11 Output menu

869 Set-Up and Operation

1. Set the Model 869 Analyzer on a stable base, a bench, mobile cart, or the floor will do.
2. Hook-up a line from the sample out quick disconnect to an atmospheric drain. Then hook-up sample flow at the sample inlet quick disconnect.
3. Turn on the 869 analyzer.
4. The startup procedure will begin by alternately flashing [tEst] and [—] while performing the memory tests.
5. The analyzer will display in sequence the analyzer number, in this case [869], and the program version number, e.g., P1.10.
6. The display test lights each of the implemented display segments in turn.
7. If the analyzer passes all the tests, then the hardware is functioning properly, and the analyzer will proceed to display dissolved oxygen.
8. If the analyzer displays +Err, this indicates that the dissolved oxygen input is offscale. +Err on start up is common and may disappear after a few minutes. Press the *Error* key to see what errors have been detected by the analyzer.
9. After completing the above steps, the analyzer is now in normal operational mode. Analyzer settings and parameters can be viewed and/or changed at any time using the keypad. Refer to the menus starting with **Figure 9**. The areas shaded in dark gray indicate program settings which can be changed by the user. Menu areas shaded in light gray are view-only menus.

Initial Instrument Set-Up

Refer to *Appendix B* for a listing of factory default settings used by the analyzer. Before putting the analyzer into operation, verify the analyzer's settings to ensure that they agree with the intended set-up. For a more detailed description of any setting, refer to the appropriate section of this instruction manual.

1. Change defaults for the output. Set input (D.O., temperature, or pressure), high limit, low limit, and on/off switch. The output can be calibrated and configured for 0-1 V or 0-100 mV.
2. Set preferences for metric or imperial units in [CONF] [unit].
3. If desired, install password security.

“Easy to use” Menu

The layout of the program is shown in the menus found in **Figure 9** and following.

The analyzer remembers where *home base* is. It remembers which areas of the menu you used last, and it will loop around columns in the menu for you. You can explore the menu with the arrow keys to find any capability and simply press **SAMPLE** to return to *home base*. Then use the *Right* arrow key to return to exactly where you were.

Home Base—Press Sample

The **SAMPLE** key's function is to provide a known starting point displaying the *home sample* or *home input*. The **SAMPLE** key is usable from anywhere in the menu.

The dissolved oxygen display is the default *home base* display for the analyzer. The analyzer's inputs—dissolved

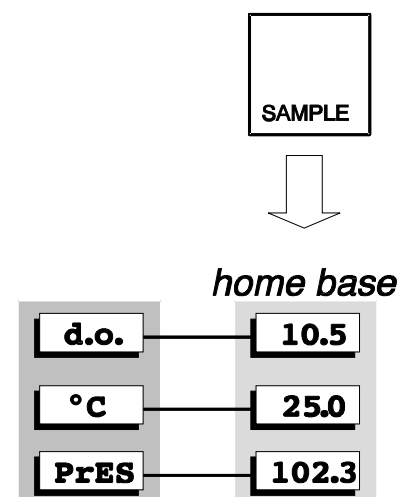


Figure 14 Home base

oxygen, temperature, and pressure—are arranged underneath each other at the left-hand side of the menu. Use the *Up* or *Down* arrow key to display each of the readings in turn.

From anywhere in the menu the **SAMPLE** key can be used to return to the dissolved oxygen or *home sample* display. The program will safely abort whatever it was doing at the time and return to display the dissolved oxygen sample.

Features

1. The analyzer has a built-in timer which returns the program to displaying the home base if no key has been pressed for 15 minutes. This time-out has the same effect as pressing the **SAMPLE** key.
If security has been enabled, as well, the timeout will change the access level back to 0 or 1 automatically, which gives the user read-only access. The user will have to enter an appropriate password to go to a higher access level. If output hold for dissolved oxygen is in

effect, the same timer will release the output hold.

2. When displaying the home base, you can press *Left* to show which of the samples is displayed. Pressing *Right* displays the same sample again.
3. If the temperature or pressure input does not show up in the menu and cannot be selected, then it has been turned off in the configuration step. The temperature and pressure inputs can be turned off and thereby effectively “disappear” from the menu if they are turned off in the configuration menu.

Arrow Keys

The four arrow keys on the keypad are used to move around the menu. The same keys can have other functions as well, e.g., see *Edit Mode*, but when moving from frame to frame in the menu these keys work as expected.

Example:

Press **SAMPLE** to make sure that you are at *home base*. Press the *Right* arrow key. One of the prompts in the main menu will be displayed. Use the *Up* or *Down* arrow keys to display the prompt above or below. If the prompt at the top or the bottom is displayed the program will loop around. Press the *Up* or *Down* key until [out] is displayed. Press the *Left* key to return to the dissolved oxygen display. Press the *Right* key again and [out] will be displayed.

Edit Mode

Edit mode is used to change a numeric value or to select between different options. The values and settings which can be edited are identified by the darker shading in the menus. Any frame which has a white background cannot be modified by going into edit mode, but can be viewed.

Editing by Selecting a Setting

Examples of selecting a value are on/off settings and switching between different alarm types. Editing a value is like picking an option from a list. You can see only one item on the list at a time.

Example:

Turn off the output. From the menu select [out] [ON.OF]. The analyzer will now display either [on] or [OFF], which are the two choices. To change the setting, press **ENTER** to go into edit mode. The display will start blinking. Use the up or down arrow key to switch between the possible options, which in this case are [on] and [OFF]. When [OFF] is displayed, press **ENTER** again to accept the new setting and leave edit mode.

Editing a Numeric Value

Numeric values such as an alarm setpoint are adjusted by going into edit mode and then adjusting each digit until the new value is displayed. Use the left and right arrow keys to move between digits and use the up and down arrow keys to adjust each digit.

When you press **ENTER** to go into edit mode two things will happen. First, the last digit will start blinking to show that this digit can be changed. Second, any blank spaces will change to zeros and a plus or minus sign will appear. Now each digit can be accessed. Change between positive and negative numbers by switching between plus and minus sign using the up or down arrow key when the plus/minus segment is blinking.






Press **ENTER** again to leave edit mode. Now before the new value is changed, the analyzer will check the new value to make sure that it is within range. If the new value is lower than the lowest value allowed for that frame, then the analyzer will use the lowest allowable value instead of the new value you entered. Likewise if the new value you entered is higher than allowable, then the highest allowable value is used instead. The analyzer will display whatever value it has stored in memory.

Example:

Change the output HIGH setting from 100 to 200. From the menu select [out] [HI]. The current setting (e.g. [100]) will be displayed. Press **ENTER** to enter edit

mode. The display will change to [+ 0100] and the last digit will start blinking. Press **CANCEL** twice to move left two digits. The third digit from the end will now be blinking. Press the up arrow key to change the '1' to '2'. Press **ENTER** again and the display will change from [+ 0200] to [200] indicating that the new value has been stored in memory. The output HI setting has now been changed from 100 to 200. Press the left arrow key to display [HI], [out] etc.

Summary of Key Functions in Edit Mode

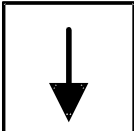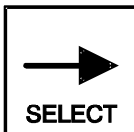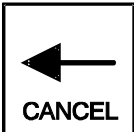	Enters edit mode. The entire display or a single digit will blink to indicate that the analyzer is in edit mode. Press the <i>Enter</i> key again to leave edit mode and accept the new value.
	Adjusts blinking digit upward or selects the previous item from the list. If a '9' is displayed then the digit will loop around to show '0'.
	Adjusts blinking digit downward or selects the next item from the list. If a '0' is displayed then the digit will loop around to show '9'.
	Numeric Values only: move to the right one digit. If blinking is already at last digit, display will loop to the +/- sign on the left.
	Numeric Values: move left one digit. If blinking is at the +/- sign, then blinking goes to the last character. Settings: restore the initial value if it was changed. Otherwise leave edit mode without doing anything.

Input On/Off Switch

The temperature and pressure inputs have been provided with an on/off switch. The most common use of this feature is to "turn off" the temperature input if no temperature compensator or temperature sensor has been installed. Turning off the temperature input will make the temperature [°C] or [°F] display at the left side of the menu disappear, as if it did not exist.

Refer to **Figure 12** for the configuration menu.

Metric or Imperial Units

By default the analyzer will use metric units. This means that temperature will be displayed using degrees Celsius and that the prompt for the temperature input will be [°C]. Using metric units, the pressure is displayed as kPa. The analyzer can also be made to use imperial units. Using imperial units, temperature will be displayed using degrees Fahrenheit and the prompt for the first temperature input will be °F instead of °C. Pressure will be displayed as PSI throughout the program.

For practical reasons, the temperature input is always identified as °C throughout this instruction manual and in the menus.

To select imperial units for the analyzer, select [unit] from the configuration menu, then go into edit mode and change the [°C] prompt to [°F]. Since this is a global setting, both the units used for temperature and for pressure will change.

Real-Time Clock

The 869 analyzer has an internal date/time clock which allows the analyzer to maintain the date and time even when the analyzer is powered off. The date and time are needed to accurately date/time stamp grab samples, system events, and data logging.

To set the real-time clock, select [CONF] [rtc] from the menu. Set the year, month, date (day of the month), hour, minute, and second. The [hund] frame displays hundreds of a second but cannot be edited.

Error Messages

To display errors and cautions detected by the analyzer, press the *error* key or select [Err] from the main menu. If there are no error and caution messages, [NONE] will be displayed; otherwise scroll through the list using the *Up* and *Down* arrow keys

Error messages are numbered. Errors are identified as [*En.e*] where *n* is the input number and *e* is the error number. For example, E1.1 is error 1 for the dissolved oxygen input. Message numbers 6 through 9 are less serious and are identified as **cautions** instead of errors, e.g. [CA*n.6*].

Off-scale errors are not numbered and are identified as [+Err] and [- Err], depending on whether the input is at the top or the bottom of the scale. The off-scale error is displayed instead of the sample reading and does not show up in the error menu with the numbered error messages, if any.

Errors cannot be removed from this list directly, but each error/caution will be removed automatically when appropriate, e.g. errors associated with improper calibration will be cleared after a successful calibration.

If no electrode or sensor is attached to an input, it may be most convenient to “turn off” the input. For example, if there is no temperature input, the temperature display would consistently be off-scale without a resistor across the input terminals, resulting in an error message E2.2 always showing in the error menu.

Error Codes

Error Code	Meaning
+Err	D.O. reading off scale (high).
- Err	D.O. reading off scale (low)
E1.1	D.O. electrode has not stabilized after 5 minutes of calibration
E1.2	D.O. sensor efficiency would be more than 500%. Previous setting retained.
E1.3	D.O. sensor efficiency would be less than 30 %. Previous setting retained.
E 1.4	Pressure compensator for dissolved oxygen not working properly.
E1.5	Temperature compensator for dissolved oxygen not working properly.
CA 1.7	D.O. input greater than 9999 ppb, cannot display on LCD.
E2.1	Temperature reading off scale (low)
E2.2	Temperature reading off scale (high)
E3.1	Pressure reading off scale (low)
E3.2	Pressure reading off scale (high)
E 9.1	Battery low

Shutdown and Start-up Procedure

Shutdown and Seal Flowcell

1. Shut off sample flow by removing the sample line at the sample inlet quick disconnect.
2. Shut off drain from flowcell and seal the flowcell to stop oxygen entering by removing the sample outlet line from its quick disconnect.
3. Leave power on.
4. The flowcell should be full of ppb dissolved oxygen water. If the flowcell is full of other sample, consideration should be given to flushing it out with pure water to avoid formation of gummy or biological deposits.
5. Since the sensor consumes small quantities of dissolved oxygen, it will store for months in a sealed flowcell if the power is on or if the cell leads are shorted.
6. If the Dissolved Oxygen reading from the sealed flowcell is steady or falling slowly there appears to be no DO leaks. So the sensor should store well. Turn off the power if the 869 analyzer will not be used for an hour or more..

NOTE: If Model 869 analyzer power will be unused for more than a month, it is desirable to remove the membrane module and store dry in order to maximize sensor lifetime.

1. With 869 still operating, remove white electrode cap and membrane module and dump the fill solution.
2. Rinse electrode with pure water and wipe dry to remove any trace of internal fill solution. The 869 display should fall to 1 ppB or less when all fill solution is gone.
3. Rinse membrane module, carefully blot dry, and store in original plastic case in which it was shipped.
4. Replace white electrode cap on DO sensor to protect the lead coils, and turn 869 off..

Start-up, if Stored in a Sealed Flowcell

1. Turn on power to the 869.
2. Reconnect drain at the outlet quick disconnect.
3. Connect new sample at the inlet quick disconnect.
4. Read ppb dissolved oxygen.

Start-up, if Stored Disassembled and Dry

1. See INSTRUMENT MAINTENANCE, *Assembly of the Dissolved Oxygen Sensor* section in this manual.

Standby Mode

Standby mode can be selected from the main menu. In standby mode the output will go to 0 VDC. When **SAMPLE** is pressed both the inputs will show [StbY] instead of the normal input measurement.

The analyzer will not resume normal operations until it is taken out of standby mode. While in standby mode the entire menu and all settings are accessible to the operator, as before. None of the settings will take effect until the analyzer is returned to normal operation.

The standby feature is protected by security level 2.

Battery Operation

The 869 analyzer has two rechargeable 9V DC batteries. Whenever external power to the analyzer is removed, the analyzer will continue to operate using battery power. The batteries will automatically recharge when external power to the analyzer is restored using the AC power adapter.

When battery power is running low, the analyzer will show error 9.1 in the error menu. Also, while the analyzer is in the sample menu, the display will alternately show the sample reading and the [-bAt] message to indicate that battery power is running low.

The battery voltage can be monitored by selecting [CONF] [bAt.v] from the menu.

Voltage Output Signal

One assignable 0-1 V output channel is provided. The user may configure the analyzer to determine which input signal will be transmitted the output channel. The output channel can be configured to transmit a dissolved oxygen, temperature, or pressure signal.

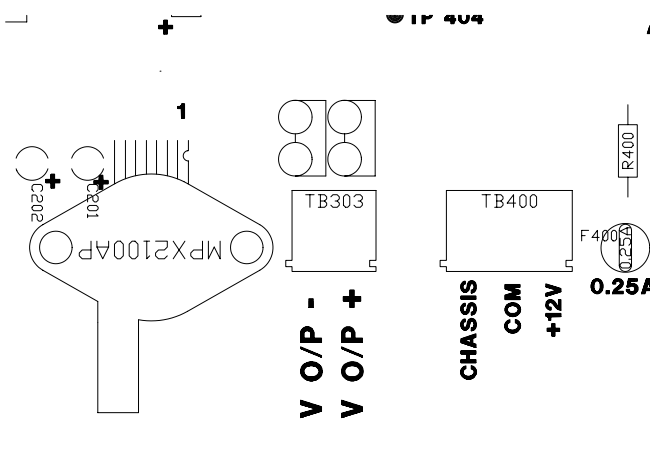


Figure 15 Output wiring

The output channel has an on/off switch and adjustable low- and high span adjustments. Output settings are selected from the [out] menu.

Wiring and Calibration

Refer to **Figure 15** for wiring instructions for the output.

The factory default is to calibrate the output for 0-1 VDC output. The output can also be calibrated for 0-100 mVDC output. For calibration, refer to *Calibration of Output* in the **TROUBLESHOOTING** section.

To make the program display of the current output, i.e. [out] [VDC], agree with the calibrated output, the program configuration needs to agree with the hardware calibration. The setting in [CONF] [out] can be changed to 0-1 or 0-0.1 VDC to agree with the hardware calibration of the output.

Output Span Adjustment

To adjust the output span or **output “window”**, set [LO] to correspond to the low end of the scale

or 0 V output, and set [HI] to correspond to the high end of the scale or 1 V output. The analyzer will automatically scale the output according to the new settings. Practically any combination of output settings can be set.

Reversing the Output

The low scale setting will normally be lower than the high scale setting. It is possible to reverse the output or “flip the window” by reversing the settings of the low and high scale.

Example:

Define an output window from 0 to 100 ppb dissolved oxygen with 100 ppb corresponding to 0 V output and 0 ppb corresponding to 1 V output. Set [LO] to 100 and set [HI] to 0.

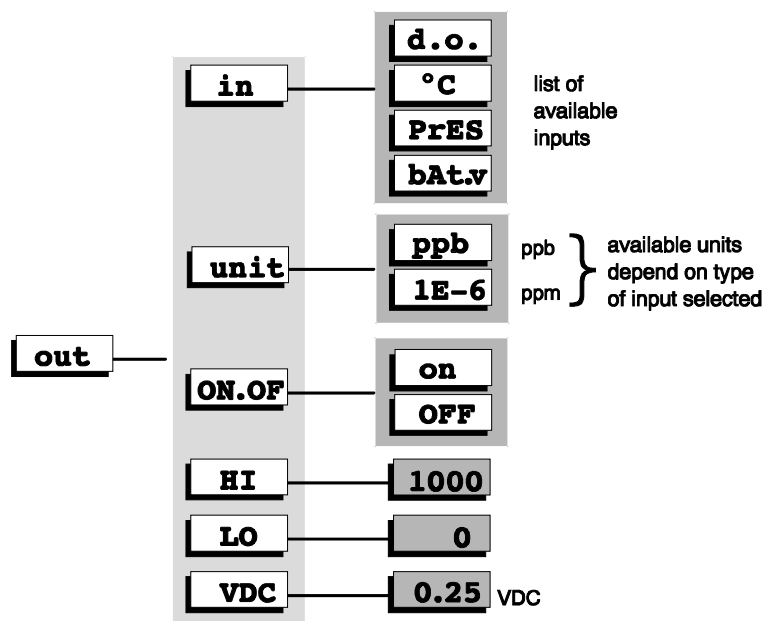


Figure 16 Output menu

Unit Selection

The output module will be using different units for its high and low settings, depending on the input selected. Select [unit] from the output menu to display the units in use for this output.

The D.O. input allows the user to select between ppm and ppb units. Edit the unit setting to choose the desired units for the HI and LO settings.

The temperature and pressure inputs will use different units depending on whether metric or imperial units are selected in the configuration menu. Temperature uses Celsius for metric and Fahrenheit for imperial units. Pressure uses kilopascal for metric and PSI for imperial units.

The choice between metric or imperial units is made in the configuration menu. See **Figure 12** on page 10.

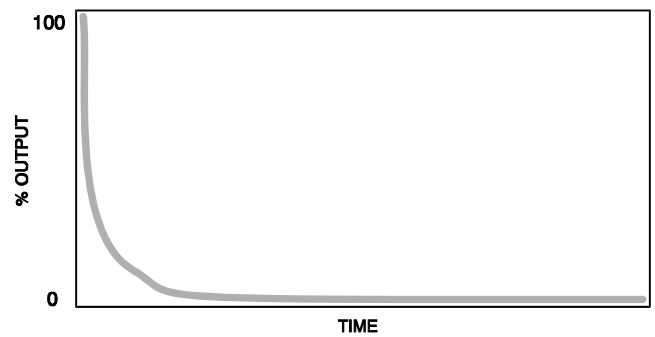


Figure 17 Typical output response of D.O. electrode

Testing With Simulated 0 to 1 V Output

Select [cur] from the output menu to display the signal currently transmitted by the output channel. The signal is displayed in V for the [0-1] configuration or in mV for the [0-0.1] configuration.. The display will be updated as the output signal changes based on the input signal and the output settings.

To simulate a different output signal press **ENTER** to enter edit mode. Use the *Up* or *Down* key to display the desired signal needed for testing the output signal. Press **ENTER** to have the displayed value take effect. The output signal will change to transmit the displayed value. This process can be repeated as often as necessary.

The output signal is held at the displayed level until the program leaves this part of the menu.

Troubleshooting and Servicing

See also the **TROUBLESHOOTING**, *Electronic Hardware Alignment* section for troubleshooting and servicing procedures.

RS232 COMMUNICATIONS

Serial communications give the analyzer the ability to send data to any computer which can capture serial data using an RS232 serial port. No special software is needed on computer to receive the ASCII data that can be sent out by the 869. Captured data can be stored on disk and other programs available to the user can be used to store the data or for further analysis.

A host computer analyzer supervisor program is available from IC Controls which will communicate directly with the analyzer. This graphical program runs under Windows 3.1 or higher. This program can be used to operate the analyzer in a network of other analyzers, display and log each analyzer's inputs graphically. As well the IC CONTROLS host gives direct control of each analyzer from your computer, plus access to the analyzers to other programs running on the same computer, or to other computers networked with the host. See parts list ordering information on the IC CONTROLS analyzer host program.

Connecting to a Computer

The 869 comes supplied with a RS232 cable with a round water-tight connector on one end and a standard 9-pin connector on the other end. Use only the cable supplied with the analyzer.



Figure 18 Serial communications wiring

1. It is good practice to first turn off the analyzer and the computer before connecting the serial cable.
2. Plug the round, black end of the cable into the analyzer. Refer to **Figure 18**.
3. Plug the 9-pin connector end of the serial cable into the port on the back of your computer. If you have a 25-pin serial port, you must obtain a 25-pin adapter to connect the cable. If all RS232 ports on the computer are in use you will need to disconnect the cable from one of the ports and connect the analyzer cable.
4. Turn on the analyzer and the computer.
5. Configure the analyzer for the desired baud rate. Select [SEr] [baud] from the menu. Baud rates from 1200 to 38400 baud can be selected, the default is 9600 baud. The 869 analyzer uses 8 data bits, no parity, and 1 stop bit, this part is not configurable.
6. To enable serial transmission by the analyzer, set the serial ON/OFF switch to ON. Serial communications are on by default. See **Figure 22**.

Format of Analyzer Output

Data transmitted by the analyzer is in simple ASCII format. Each line of data is terminated by a LINEFEED/NEWLINE. Most output consists of a line number, a date/time field, followed by the data fields separated by commas. Comma-separated fields are designed to make it easy to import the data into other programs for analysis, for example into a spreadsheet.

Example: Windows 3.1 Terminal Program

To illustrate the capturing of data on a computer, following is the description for loading and setting up the *TERMINAL* program which is part of the standard Windows 3.1 operating system.

1. Load Windows 3.1, then switch to the program manager.
2. From the accessories group double-click on the "Terminal" icon.
3. From the menu select Settings | Communications... Set the communications settings as shown in figure 19. The Connector setting in the figure is set to COM1, match this setting to reflect the

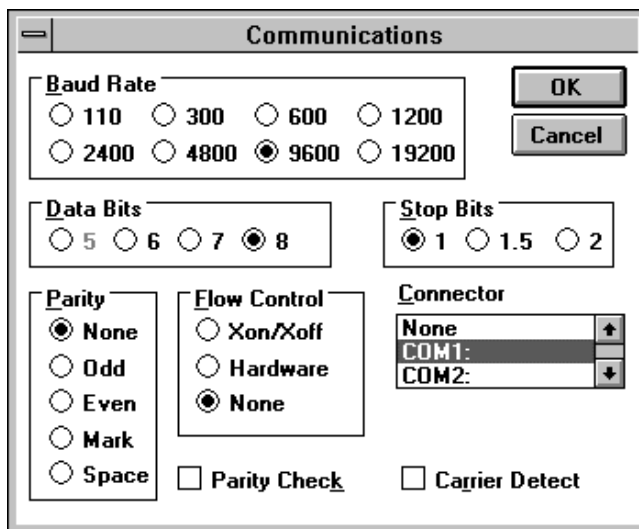


Figure 19 Communications settings

- connection on your computer.
4. To capture data into a file, select Transfers | Receive text file... from the menu. Specify the file name and location (Example: c:\logs\log01.dat). The terminal program will now store any ASCII data sent out by the analyzer into the specified file.
 5. To stop or pause data collecting, use the buttons at the bottom left of the window.

Example: Windows 95/98/NT Hyperterminal

To illustrate the capturing of data on a computer, following is the description for loading and setting up the *Hyperterminal* program, versions of which come with Windows 95, Windows 98, and Windows NT.

1. From the Start menu select Programs | Accessories | Communications | Hyperterminal (Win95/98) or Programs | Accessories | Hyperterminal (WinNT), then click on the Hyperterminal program icon.
2. For a new communications setup, you will be prompted for the name of the connection. Give the connection a descriptive name, e.g., "869 analyzer", then click on OK.
3. In the "Connect To" dialog box click on the "Connect using:" list and select the COM port to which the 869 is connected, e.g., select COM1.
4. In the "COM1 Properties" dialog box use the following settings:
 Bits per second: 9600 (baud rate)
 Data bits: 8
 Parity: None
 Stop bits: 1
 Flow control: None
 Click on OK. To return to this dialog box later, for example to change the baud rate, select File | Properties from the menu, then click on the "Configure..." button.
5. To capture data into a file, select Transfers | Capture text... from the menu. Specify the file name and location (Example: c:\logs\log01.dat) or use the Browse button to select an existing file to append to. The hyperterminal program will now store any ASCII data sent out by the analyzer into the specified file.
6. To pause or resume data collecting to the specified file, select Transfers | Capture text..., then Stop or Resume.
7. To finish the collecting of data, select Transfers | Capture text... | Stop from the menu.
8. When exiting the program, a dialog box will ask: Do you want to save session 869 analyzer? If you respond Yes, the next time you select Hyperterminal from the Start menu, you will be able to select the "869 analyzer" settings.

Example: Load Log File in Excel

The following example illustrates how to load a log file into Microsoft Excel 5.0.

1. By default, the IC Net Access program uses the .DAT extension for its log files. Excel prefers .TXT, .PRN, or .CSV. You can keep the .DAT extension or use .TXT or .CSV.
2. Open Excel, then select File | Open from the menu.
3. Navigate to the log file. If you used the .PRN, .TXT, or .CSV extension for the log file, you may want to change "List Files of Type" to "**Text Files**", otherwise use **All Files (*.*)**. Select the log file, then click on OK.
4. The "Text Import Wizard" dialog box should open. In "Original Data Type" select **Delimited**, then click the "Next >" button.
5. Under **Delimiters** select "Comma".
6. Click the "Finish" button to load the log file into Excel.
7. The date/time stamp will be loaded in column A, and the input values will be loaded in columns B, C, etc. The date/time stamp will be treated as text, while the input values will be treated as numeric values that can be graphed, manipulated, etc.

	A	B	C
1	980910 11:41:57	3.21	18.01
2	980910 11:47:59	3.21	18.01
3	980910 11:48:00	-3.21	18.01
4	980910 11:48:01	-3.21	18.01
5	980910 11:48:02	-3.21	18.01
6	980910 11:48:03	-3.21	18.01
7	980910 11:48:04	-3.21	18.01
8	980910 11:48:05	-3.21	18.01

Figure 20 Excel spreadsheet

Example: Load Log File in Quattro Pro

The following example illustrates how to import a log file into Quattro Pro for Windows.

1. By default, the IC Net Access program uses the .DAT extension for its log files. Quattro Pro prefers .TXT or .PRN. You can keep the .DAT extension or use .TXT
2. Open Quattro Pro and start with a new, empty notebook, or open an existing notebook to which the data log should be added.
3. Select Notebook | Text Import... from the menu.
4. Under **Option** select "Only Commas".
5. Navigate to the log file. You may want to change **filename** from *.TXT to *.* to be able to 'see' the log file.
6. Click on OK to import the log file into Quattro Pro.
7. The date/time stamp will be loaded in column A, and the input values will be loaded in columns B, C, etc. The date/time stamp will be treated as text, while the input values will be treated as numeric values that can be graphed, manipulated, etc.

	A	B	C
1	980910 11:41:57	3.21	18.01
2	980910 11:47:59	3.21	18.01
3	980910 11:48:00	-3.21	18.01
4	980910 11:48:01	-3.21	18.01
5	980910 11:48:02	-3.21	18.01
6	980910 11:48:03	-3.21	18.01
7	980910 11:48:04	-3.21	18.01
8	980910 11:48:05	-3.21	18.01

Figure 21 Quattro Pro spreadsheet

Date/Time Formats

The different types of data that the analyzer can send out all support date/time stamping. In the respective menus the date/time format is selected in the [da.ti] frame, and is entered as a simple number. Following are examples of the date/time formats available and the format numbers that need to be specified to select a particular date/time format:

Date/Time Formats:

- 1: Sun Sep 16 01:03:52 1973
- 2: 15-Dec-1997 01:03:52
- 3: mm/dd/yy 01:03:52
- 4: dd.mm.yy 01:03:52

Time-only Formats:

- 10: 13:03:52
- 11: 1:03:52 pm

The different date/time formats are fixed-length, so that each part of the time or date will line up on the printout. This will make it easier to parse the date/time field if it is being imported into another program for further analysis.

The analyzer is designed to be year-2000 compliant, it will correctly handle years beyond 1999.

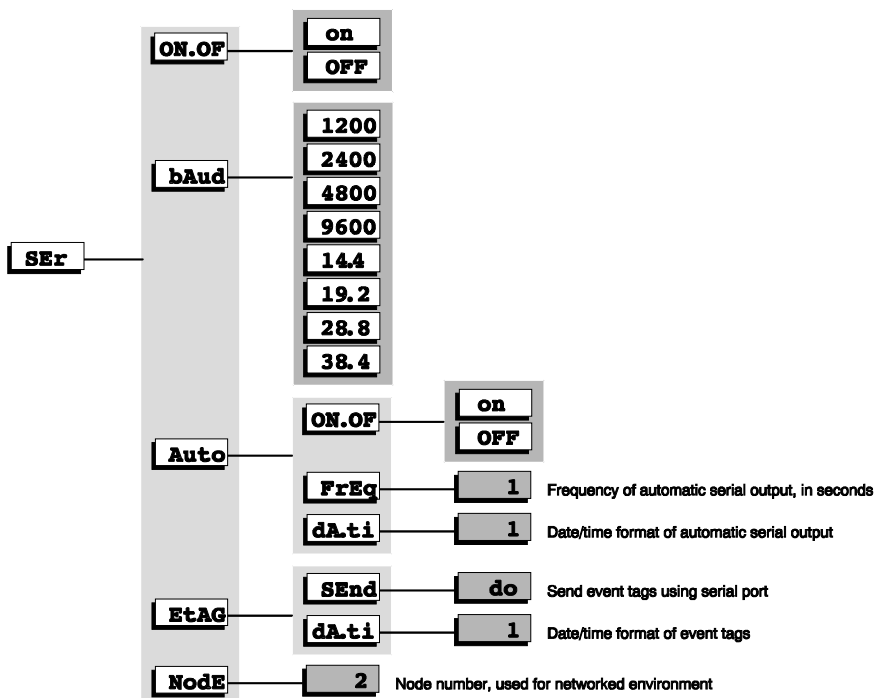


Figure 22 Serial communications menu

Grab Sample Measurements

The 869 analyzer will store up to 150 dissolved oxygen values as grab samples. The analyzer can be taken from location to location, and at each point a numbered grab sample can be stored in the analyzer memory for later retrieval.

Each grab sample measurement is individually date/time stamped by the analyzer. Grab sample measurements can be displayed from the analyzer, but the serial communications link is used to retrieve the complete list of date/time stamped grab sample measurements that were taken.

Storing a grab sample measurement

1. Properly hook up the analyzer to the sample stream that is to be measured so that the measurement that will be stored will be accurate.
2. When ready to store a sample, select [GrAb] from the main menu.
3. From the grab sample menu select [Stor]. Refer to figure 23.
4. Press Enter to specify the grab sample number that needs to be stored. With the display flashing, use the arrow keys to adjust the sample number. Press the Enter key again when finished.
5. Press the Select (right arrow) key again to show a D.O. reading. The display will be blinking to indicate that the analyzer is ready to accept the displayed reading.
6. When you are satisfied with the displayed D.O. measurement, press Enter to store the grab sample measurement in the analyzer's memory. The measurement will automatically be time/date stamped internally.

7. Press the Sample key to return to normal measurement operation or use the left arrow key to return to the grab sample menu.
8. If desired, the same grab sample measurement number can be repeated. When the same sample number is used, the previous measurement and date/time stamp will be overwritten.

Viewing a Grab Sample Measurement

The analyzer can display a D.O. measurement from a grab sample measurement which has already taken.

1. Select [GrAb] [GEt] from the menu to get a measurement from the analyzer menu.
2. Press Enter to specify the grab sample number that needs to be retrieved. With the display flashing, use the arrow keys to adjust the sample number. Press the Enter key again when finished.
3. Press the Select (right arrow) key again to show the D.O. measurement. From this display the measurement can only be viewed, not edited. If you have selected a grab sample number that is erased, the display will show [—] instead of a D.O. measurement.

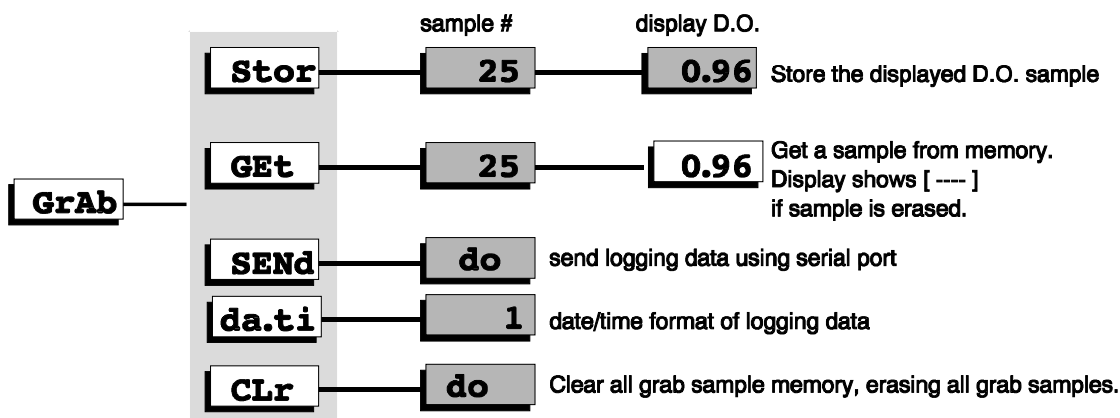


Figure 23 Grab sample menu

Clearing Grab Samples from Memory

Grab samples can be cleared (erased) from the analyzer memory. It is not possible to erase a single grab sample, the only option is to erase all grab samples or to simply reuse the same grab sample numbers over again.

To erase *ALL* grab samples from analyzer memory:

1. Select [GrAb] [CLr] from the menu.
2. With the display flashing [do], press Enter.

*Note: there is no way to restore grab sample measurements once memory is cleared. Be very sure that you **do** want to clear grab sample memory before pressing Enter.*

Sending Grab Samples using Serial Port

Sample output of grab samples using the serial port:

```
1, Thu Dec 18 17:48:00 1997, 0.86, 25.0
2, Thu Dec 18 17:50:00 1997, 1.20, 25.1
```

The first number is the grab sample number, followed by the date/time stamp. The sample above used format 1. Refer to the RS232 COMMUNICATIONS, Date/Time Formats section for specific date/time formats.

The first number following the date/time is the D.O. measurement in ppb D.O. The units for ppb are always D.O., regardless of the units setting in [d.o.] [unit] used by the sample display.

The last number is the temperature at which the grab sample was taken. The units used here respect the metric/imperial setting in [CONF] [unit].

To send serial grab sample data from the analyzer,

1. Connect the analyzer to the computer using the supplied serial cable.
2. Set up the communications program as outlined in the RS232 COMMUNICATIONS section.
3. Select the desired date/time format from [GrAb] [da.ti].
4. Select [GrAb] [SEnd] from the display, then press Enter on the flashing [do]. The analyzer will only send out grab samples that have been stored. The display will rapidly display the numbers 1 through 150 while it is sending or checking each grab sample in turn.

Data Logging

The 869 analyzer provides two methods for logging information to be sent out using the serial port:

— automatic, continuous output at specified intervals of the 4 measurements available to the analyzer: D.O., temperature, pressure, and internal battery voltage.

— internal logging of approximately 1000 measurements, for later sending using the serial port. Only one inputs can be logged at a time, typically this will be the D.O. input.

Automatic Logging

Sample output of automatic, continuous logging using the serial port with frequency set to 1 second intervals:

```
Thu Dec 18 17:51:10 1997, 1.00, 25.0, 101.3. 8.01
Thu Dec 18 17:51:11 1997, 1.00, 25.1, 101.3. 8.01
Thu Dec 18 17:51:12 1997, 1.01, 25.1, 101.3. 8.01
Thu Dec 18 17:51:13 1997, 1.01, 25.1, 101.3. 8.00
```

The first part of each line is the date/time stamp. The sample above used format 1. Refer to the RS232 COMMUNICATIONS, Date/Time Formats section for available date/time formats.

The first number following the date/time is the D.O. measurement in ppb D.O. The units for ppb are always D.O., regardless of the units setting in [d.o.] [unit] used by the sample display.

The second number is the current temperature of the sample. The units used for temperature respect the metric/imperial setting in [CONF] [unit].

The third number is the current pressure of the sample. The units used for pressure respect the metric/imperial setting in [CONF] [unit].

The last number is the internal battery voltage of the sample. The units used for pressure respect the metric/imperial setting in [CONF] [unit].

To send continuous data from the analyzer,

1. Connect the analyzer to the computer using the supplied serial cable.
2. Set up the communications program as outlined in the RS232 COMMUNICATIONS section.
3. Select the desired date/time format from [SEr] [Auto] [da.ti].
4. Select [SEr] [Auto] [FrEq] from the display. This number is the output frequency, specified in seconds. For 1-second intervals use 1, for 1-minute intervals use 60, or for 1-hour intervals use 3600. Any interval from 1 to 9999 seconds can be specified.

4. Select [SEr] [Auto] [ON.OF] from the display. Change the on/off setting from OFF to ON.

Note: the analyzer resets the on/off setting to OFF whenever [SEnd] is selected from the menu to send other types of data, e.g. grab sample data. To restart automatic, continuous logging after sending other data, you must change the [SEr] [Auto] [ON.OF] [OFF] setting to [ON] again.

Internal Data Logging

The 869 analyzer will log approximately 1000 dissolved oxygen values internally, storing readings at a specified interval. The analyzer can be left to log data at a particular location and store the readings internally. Later the logged data can be sent to a computer for storage and/or further analysis.

Internal logging data is date/time stamped by the analyzer. The data log cannot be displayed directly from the analyzer, but instead the serial communications link is used to retrieve the complete data log of date/time stamped D.O. data that was logged.

Setup for Data Logging

1. Select [iLOG] [FrEq] from the display. This number is the logging frequency, specified in seconds. For 1-second intervals use 1, for 1-minute intervals use 60, or for 1-hour intervals use 3600. Any interval from 1 to 9999 seconds can be specified.
2. Select [iLOG] [in] from the menu. Select one of the available inputs for logging. Only one input can be logged internally at any one time. In addition to the D.O., temperature, and pressure inputs, the battery voltage can also be logged.
3. Select [iLOG] [FULL] from the menu. This setting specifies what the analyzer should do when the logging buffer has been filled. Set to [cont] to continue logging when the buffer is full. In this case each new data point that is stored in the log will erase the oldest data point. Set to [StOP] to stop logging when the buffer is full. In this case the analyzer will fill up the data logging memory (approximately 1000 data points), and then simply stop logging, preserving all data points that have been taken.
3. When you are ready to start logging, select [iLOG] [StAr] from the menu. Press Enter when the flashing [do] is displayed. The analyzer will briefly display [donE] to indicate that it has completed the desired action (starting the data log). At this point the logging menu will change somewhat, to indicate the options available while logging is in progress. Refer to figure 24.

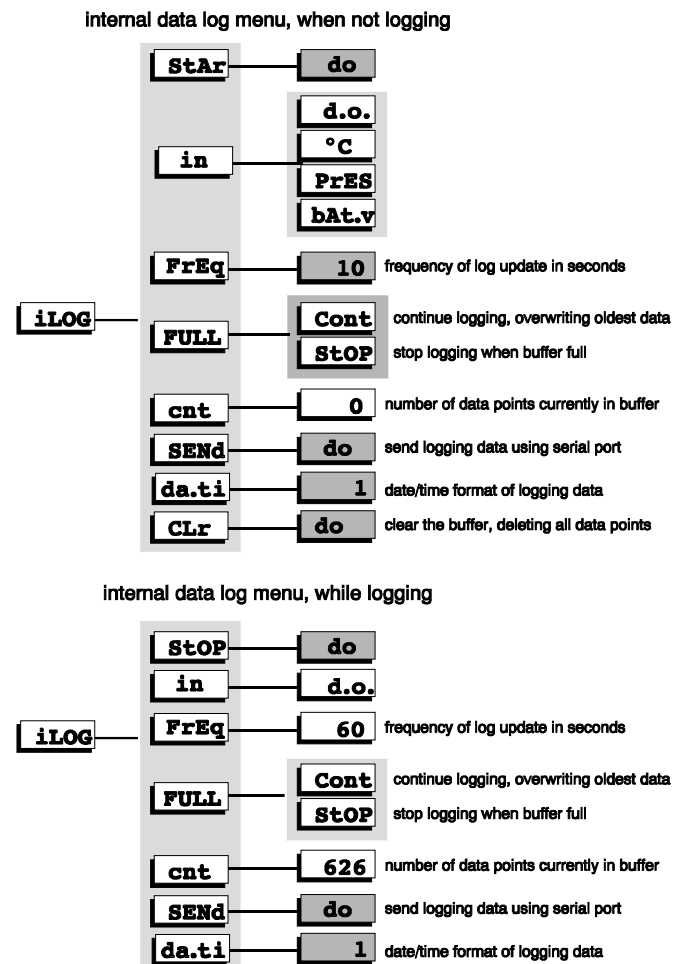


Figure 24 Internal data log menu

Sending the Logged Data

Sample output of internally logged using the serial port:

```
1, Thu Dec 18 17:48:00 1997, 0.00
```

The first number is the data point number. Data points are sequentially numbered from 1. The next part of each line is the date/time stamp. The sample above used format 1. Refer to the RS232 COMMUNICATIONS, Date/Time Formats section for specific date/time formats.

The number following the date/time is the D.O. measurement in ppb D.O. The units for ppb are always D.O., regardless of the units setting in [d.o.] [unit] used by the sample display.

To send the logged data to the computer,

1. Connect the analyzer to the computer using the supplied serial cable.
2. Set up the communications program as outlined in the RS232 COMMUNICATIONS section.
3. Select the desired date/time format from [iLOG] [da.ti].
4. Select [iLOG] [SEnd] from the display, then press Enter on the flashing [do]. The analyzer will only send out the D.O. data points that have been logged. The display will rapidly display the numbers 1 through 1000 (or however many D.O. data points have been logged) while it is sending each data point.

Displaying Logging Status

From the menu select [iLOG] [cnt]. This count number shows the number of data points that have been logged. While the analyzer is logging, you will be able to see this number incrementing. The data point count will be 0 after the data log has been cleared from memory. Also, the [cnt] frame must show 0 before a new data log can be started. The [StAr] frame won't be in the menu while the analyzer is actively logging data.

Ending a Data Log

To end a data log, e.g. to stop logging more points, select [StOP] from the logging menu. Press Enter when the analyzer displays the blinking [do]. The analyzer will briefly display [donE] to indicate that it has stopped the logging operation.

Data logging will stop automatically if the [FULL] setting is set to [StOP] and the entire logging buffer has been filled.

Clearing the Data Log from Memory

The data log can be cleared (erased) from the analyzer memory. The menu will not allow you to start a new log until the existing log has been explicitly erased. This is a safety feature to ensure that you don't accidentally wipe out an existing log when starting the next log.

To erase the data log from memory:

1. Select [iLOG] [CLr] from the menu.
2. With the display flashing [do], press Enter.

*Note: there is no way to recover a data log once memory is cleared. Be very sure that you **do** want to clear the log from memory before pressing Enter.*

System Event Tags

The analyzer stores important system events in an internal log. The system events are automatically tagged with a date/time stamp. The analyzer stores the last 40 event tags in memory. Each new event will erase the oldest event. System events are the following:

1. Analyzer turned OFF
2. Analyzer turned ON
3. An error or caution message (error/caution message number stored)
4. The analyzer is calibrated. (calibration parameters stored: D.O., % efficiency, temperature, pressure)

Event tags cannot be displayed using the analyzer display capability, but must be sent out using the serial connection.

Event Tag Format

Sample output of event tags:

```
1, Thu Dec 18 14:50:47 1997, ANALYZER OFF
2, Thu Dec 18 17:47:30 1997, ANALYZER ON
3, Thu Dec 18 17:47:30 1997, E1.5
4, Thu Dec 18 17:47:31 1997, E2.2
5, Thu Dec 18 18:05:22 1997, CAL, 8240, 100.0, 25.0, 101.3
```

The first number is a sequential number. The next part of each line is the date/time stamp. The sample above used format 1. Refer to the RS232 COMMUNICATIONS, Date/Time Formats section for specific date/time formats.

The last part of each line describes each event tag, either ANALYZER OFF, ANALYZER ON, En.n/CAn.n, or CAL.

For cal parameters, the numbers represent ppb D.O., % efficiency, temperature in °C, and pressure in kPa. If imperial units are selected in the configuration section, temperature will display in °F and pressure will display in PSI.

To send event tags from the analyzer,

1. Connect the analyzer to the computer using the supplied serial cable.
2. Set up the communications program as outlined in the RS232 COMMUNICATIONS section.
3. Select the desired date/time format from [SEr] [ETAG] [da.ti].
4. Select [SEr] [EtAG] [SEnd] from the display, then press Enter on the flashing [do]. The analyzer will send all the event tags. The

display will rapidly display the numbers 1 through 40 while it is sending each data point.

869 CALIBRATION

Removal of the Dissolved Oxygen Sensor

1. Stop the sample flow to the dissolved oxygen sensor by disconnecting at the sample quick connector.
2. Leave the drain connection to atmosphere in place (outlet).

CAUTION: Removal of the dissolved oxygen sensor from a sealed flowcell will vacuum stretch the thin dissolved oxygen sensing membrane. Stretching the membrane will cause slow response and higher readings at low ppb levels. Splitting the membrane will cause dissolved oxygen sensor failure.

3. Release the large nut on the top of the flowcell a few turns. It should only be hand tight.
4. Gently rock the dissolved oxygen sensor back and forth to ease the O'ring seal in the compression throat. This also lets air enter the flowcell and breaks any vacuum that would form.
5. Back the large nut off the rest of the threads and gently lift the sensor.
5. Slowly remove the sensor, allowing air to enter the flowcell.

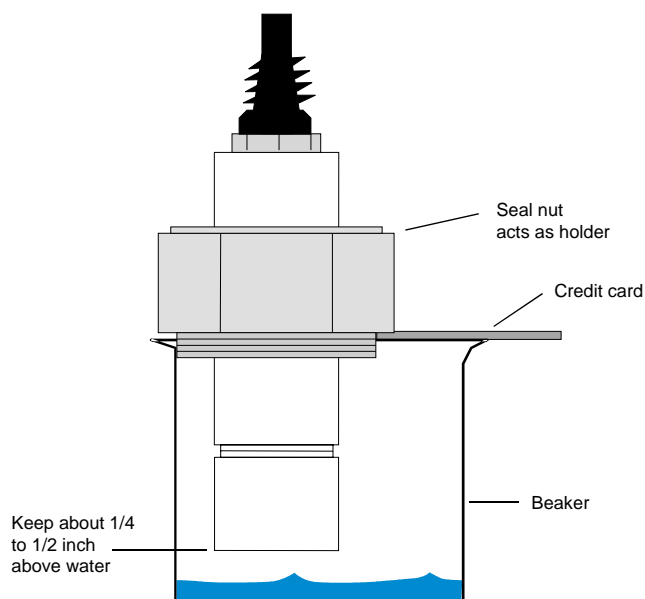


Figure 25 D.O. sensor calibration

Calibration Procedure

When executing the calibration procedure the analyzer will adjust the efficiency constant for the D.O. cell.

1. Remove sensor from flowcell.
2. Dry the tip carefully with a tissue, making sure there are no water drops on the membrane, and then take the sensor and suspend it above water. See **Figure 25**.
3. Press the **Cal** key. The analyzer will show the dissolved oxygen reading. The display will be blinking to indicate that the analyzer is calibrating. Press the **ENTER** key when the electrode reading has stabilized, the analyzer will calibrate using the current dissolved oxygen reading.
- NOTE:** The calibration is automatic from here on. the display will stop flashing and the new sensor efficiency constant will be calculated.
4. When the reading stops blinking, the calibration has been completed. The reading will be displayed using the new calibration value.
5. Press the **SAMPLE** key to return to normal operation. If this key is not pressed, the analyzer will return to the sample display after the 15 minute timeout.
6. Output hold will be in effect until it is turned off or until no key has been pressed for 15 minutes.
7. After a successful calibration, select [d.o.] [EFF] from the menu to inspect the new calibration value. This value is used internally to determine the analyzer gain.

It is possible to speedup the automatic operation of the analyzer. Also, the calibration may be redone or started over at any time. Press **← CANCEL** to display the [CAL] frame, then press **SELECT →** to restart the calibration.

The calibration setting will be based on the temperature used for temperature compensation and the pressure used for pressure compensation. The proper ppm dissolved oxygen reading is obtained from an internal table. See **Appendix C** for a table of values used by the 869 analyzer.

Error Checking

If the analyzer detects a problem during calibration, an error message will appear. If an error has been detected then the calibration was not successful and the previous calibration has been retained. Press any key to acknowledge the error message. Take corrective action and redo the calibration. Consult the *Troubleshooting* section of the manual for details.

Press any key to resume normal operation after an error message has appeared.

Inserting the Sensor into the Flowcell

1. Inspect the inside of the flowcell for any foreign matter and wipe out if necessary. It should appear clean and clear of any particles.
2. Insert the assembled and calibrated sensor through the nut and O'ring. Rock back and forth to pass the O'ring.
3. Press slowly all the way down until the sensor firmly contacts the flowcell bottom.
4. By hand, tighten the nut firmly to get a good seal. This should be good for 15 to 90 psig.

Warning: Do not use a large wrench to tighten the nut. The plastic parts of the sensor could be broken or deformed.

Output Hold during Cal.

The 869 analyzer allows the user to hold the output for dissolved oxygen. Output hold affects both output and alarm if and when these monitor the dissolved oxygen input.

Enable output hold by changing the [d.o.] [HOLd] setting to [YES]. Output hold has the following effect:

- 0 to 1 VDC output signal transmitting dissolved oxygen is frozen at the current level
- alarm monitoring D.O. will maintain existing on/off condition.

The output hold remains in effect until the operator changes the [d.o.] [HOLd] setting to [no], or until no key has been pressed for 15 minutes. The 15-minute timeout ensures that output hold for dissolved oxygen will not remain in effect for longer than 15 minutes if the analyzer is left unattended. If it is desired to freeze the outputs for longer outages, use standby mode in the main menu.

Zero Testing the DO Sensor

The best way to zero check at the point of use in the plant, is to use IC CONTROLS Zero Dissolved Oxygen Standard, part number A1100193. Alternately a slower approximate zero can be obtained using a solution of sodium sulfite in water.

Submerge the dissolved oxygen sensor in a deep beaker so that it is 2 to 3 inches below the surface of the zero standard. See **Figure 26**. Provide gentle mixing to ensure the oxygen present is consumed. Then cover the beaker with parafilm to preserve product integrity. Let sit for five minutes. The sensor should rapidly fall to low ppb levels, thus confirming operation of the sensor.

Discard used zero standard after use, as exposure to air will rapidly exhaust it. Tightly reseal the storage bottle for the same reason.

Preparation of Sodium Sulfite Solution:

To 1 liter of distilled water add 20 grams of Na_2SO_3 and mix thoroughly. Ensure that the solution is used within 8 hours because the oxygen scavenger will be used up quickly with exposure to air.

Use of sodium sulfite to get a zero is similar to use described above for zero standard but it may take a while to get to low ppb levels and/or zero may never be reached.

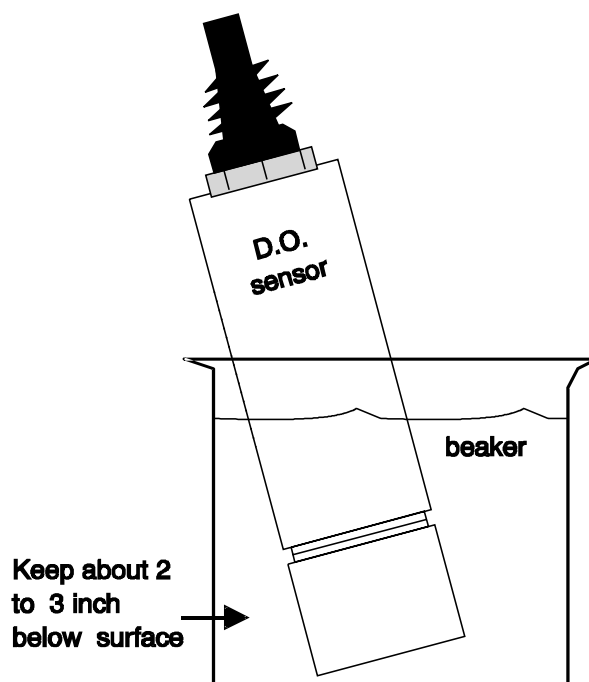


Figure 26 DO sensor zero

Temperature Compensation

Almost all industrial applications encounter fluctuating temperature and need rapidly responding automatic compensation. IC CONTROLS dissolved oxygen sensors have a TC built into the dissolved oxygen sensor. The TC is wired to the analyzer, allowing the 869 analyzer to provide digital temperature compensation.

Selecting Manual Temperature Compensation

To see the current temperature compensation method used by the 869 analyzer during calibration, select [d.o.] [t.c.] from the menu. See **Figure 27**.

At this point either [Auto] (for automatic temperature compensation), or [SEt] (for manual temperature compensation setpoint) will be displayed, depending on the current setting. To change the setting from [Auto] to [SEt] press **ENTER** to edit the current setting. The display will start blinking, indicating that a selection needs to be made. Use the *Up* or *Down* arrow key to display [SEt]. Press **ENTER** to select manual temperature compensation.

With [SEt] still displayed, press **SELECT→** to display and/or adjust the temperature setting to be used with manual temperature compensation. If the current value needs to be changed, press **ENTER** to edit the current setting. The display will start blinking. Use the *Up* or *Down* arrow key to display the desired temperature for manual temperature compensation. Press **ENTER** to accept the displayed value.

Barometric Pressure Compensation

The 869 analyzer uses a pressure sensor inside the analyzer case to measure the atmospheric pressure. If the atmospheric pressure rises or falls, and/or if the pressure in the analyzer room differs from the local barometric pressure, the 869 analyzer will automatically read the correct pressure. The 869 will also compensate for the correct altitude to give accurate dissolved oxygen partial pressures during calibration. While the barometric pressure measurement only affects the 100 % saturation reading at calibration, its use eliminates calibration errors that may cause all readings to be off by as much as 5 % or more.

The 869 analyzer can also be used as a handy atmospheric pressure transmitter.

Selecting Manual Pressure Compensation

To see the current pressure compensation method used by the 869 analyzer during calibration, select [d.o.] [Pr.C.] from the menu. See **Figure 27**.

At this point either [Auto] (for automatic pressure compensation), or [SEt] (for manual pressure compensation setpoint) will be displayed, depending on the current setting. To change the setting from [Auto] to [SEt] press **ENTER** to edit the current setting. The display will start blinking, indicating that a selection needs to be made. Use the *Up* or *Down* arrow key to display [SEt]. Press **ENTER** to select manual pressure compensation.

With [SEt] still displayed, press **SELECT→** to display and/or adjust the pressure setting to be used with manual pressure compensation. If the current value needs to be changed, press **ENTER** to edit the current setting. The display will start blinking. Use the *Up* or *Down* arrow key to display the desired pressure for manual pressure compensation. Press **ENTER** to accept the displayed value.

When metric units are selected (the default), pressure is displayed in kPa. When imperial units are selected, PSI is used.

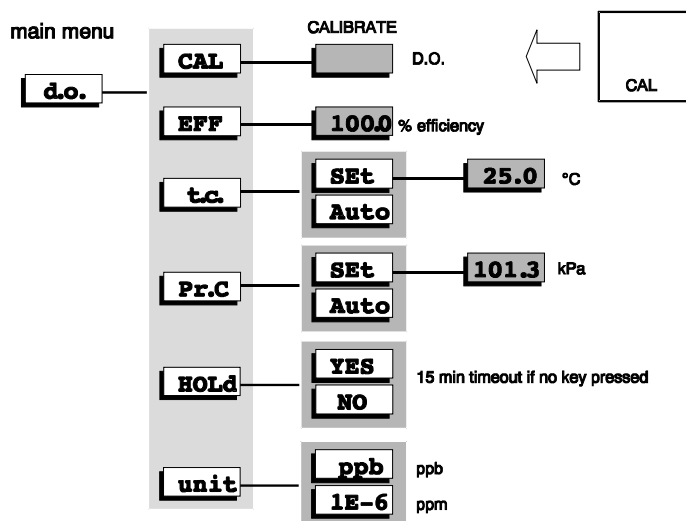


Figure 27 Dissolved oxygen menu

Range: Automatic (or Manual)?

Refer to **Figure 28**.

The 869 dissolved oxygen analyzer is an auto-ranging analyzer. The analyzer has four ranges and will automatically switch between these ranges to avoid going off-scale. Under normal operating conditions the analyzer will always be configured to switch between ranges automatically. The input ranges described here are part of the D.O. measuring circuitry.

You can determine the input range which the D.O. measuring circuit is currently using by selecting [CONF] [in] [d.o.] [rANG]. If the analyzer is using manual ranging for the D.O. measurement then you can go into edit mode and switch ranges. If the analyzer is using automatic ranging then this setting can be viewed only.

Manual Ranging

By default the analyzer is configured to automatically switch between ranges. The automatic switching capability can be disabled in the configuration menu by changing the setting of [CONF] [in] [d.o.] [AUtO] from [YES] to [no]. Once automatic ranging has been disabled you can manually adjust the range by changing the setting in [CONF] [in] [d.o.] [rANG].

Displayed Range

The measuring range of the instrument, e.g. 0 to 10 000 ppb dissolved oxygen, is determined by the gain used by the analyzer itself and the cell current of the dissolved oxygen sensor. The displayed measuring range is determined by multiplying the cell current by the analyzer range gains.

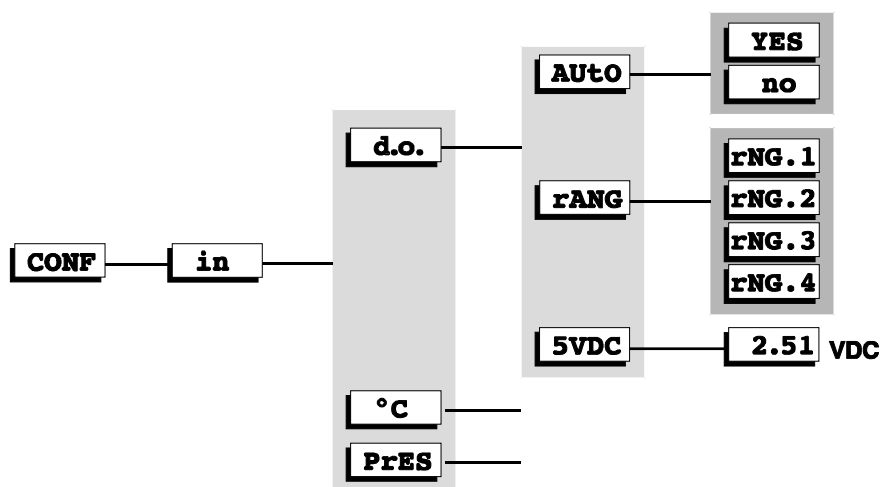


Figure 28 Configuration menu for D.O. input

SECURITY

Password Security

As part of the installation procedure you need to decide whether password security is to be implemented or not. The factory default is no security.

No password security should be necessary if you are the only user and no protection of settings is needed. Password security should be implemented for critical applications where program settings may only be changed by authorized personnel.

For minimal security IC CONTROLS advises that the user set a level 2 password. Leaving the level 1 password at "000" gives the operator complete access to all areas of the program but does not allow him to change program settings in the configuration menu. With minimal security in place you prevent unauthorized users from enabling password security.

Access Levels

access-level	description
0	View-only access to all settings
1	Access to all settings except for configuration menu. Usage: operator access. no changes can be made to configuration and passwords cannot be changed.
2	Access to all settings. This gives you the same access to the program as when password security is not enabled. Passwords can be changed. Usage: installation, management.

Having security disabled gives you the same access to the program as being at access-level 2 at all times.

With security enabled any operator can view settings anywhere in the program. When you do not have proper access rights, the program will display [PASS] for 2 seconds, indicating that you must first enter a proper password before you are allowed to proceed.

Enabling Security

When security is disabled both password 1 and password 2 are set to "0000." Security is enabled by setting password 2 to a non-zero value.

Select [CONF] [PAS.2] from the menu. The analyzer will display [0000]. Use the arrow keys to change the display to the desired password for level 2.

You can press **SAMPLE** at any time to safely cancel password entry. Press **ENTER** to enter the password into memory and to enable password security. The analyzer program automatically returns to the configuration menu.

With only password 2 set to a non-zero value, level 2 access is required to make changes in the configuration menu but all other settings are unprotected. Effectively the user will always have at least level 1 access.

At this point password 1 is still "000." You may optionally enable operator access control or level 1 security by changing the level 1 password from "000" to a non-zero value. Change the password by selecting [CONF] [PAS.1] from the menu, then entering an appropriate 3-digit password.

You may want to write down the passwords you set and store them in a secure place. Once a password has been set there is no way to redisplay it. Since passwords are set in the configuration menu, level 2 access is required to change either password. If you have forgotten the level 2 password, there is no simple way to regain access to the analyzer. Contact IC CONTROLS if you find yourself locked out of the analyzer.

Disabling Password Security

Password security can be disabled by setting the level 2 password to "0000." In order to change the password you must first have level 2 access to the program.

Select [CONF] [PAS.2] from the menu, then press **ENTER** when the program displays [0000]. Both passwords 1 and 2 are set to "0000" and security is now disabled. The main menu will be changed to exclude the [PASS] frame, and the configuration menu will no longer have the [PAS.1] frame.

Password Example—a Quick Tour

With security disabled, select [CONF] [PAS.2] from the menu. Set the level 2 password to "0002". Select [CONF] [PAS.1] from the menu. Set the level 1 password to "001." Security is now enabled.

Select [PASS] from the main menu. Press *Enter* with [0000] displayed. The analyzer will display [ACC.0] to indicate we are now at access level 0.

Try changing the output 1 low setting. Select [out] [out1] [LO] from the menu. The current value will display. Press *Enter* to go into edit mode. The analyzer will display [PASS] for 2 seconds because

we need to enter a password first. Level 1 security is needed to change this setting.

Select [PASS] from the main menu again. Change the displayed value to [0001], which is the level 1 password. Press *Enter*. The analyzer will display [good], followed by [ACC.1], indicating that the password is valid and that we now have level 1 access.

Try changing the output 1 low setting again. You will find that this time we can go into edit mode unhindered.

Select [PASS] from the main menu again. Enter the level 2 password, which is "0002." We are going to set the level 2 password to "0000" again to disable password security. Password 2 is found in the configuration menu and therefore requires level 2 access before it can be accessed. Select [CONF] [PAS.2] from the menu. Press *Enter* with [0000] displayed. Both passwords are set to "0000" again and password security is disabled.

Entering a Password

With security enabled, the operator will need to enter a password to gain full access to all analyzer functions. To enter a password, select [PASS] from the main menu. The analyzer will display [0000]. Use the arrow keys to display your level 1 or level 2 password, then press **ENTER**. The program will display [good], followed by your access level before returning to the main menu. If an incorrect password was entered the program displays [bAd] instead. Refer to the chart at left to determine how the program validates a password.

You will now have level 1 or level 2 access for as long as you are working with the analyzer. The access level will automatically be restored to level 0 after no key has been pressed for 15 minutes. This 15-minute timeout will also redisplay the main sample.

It is good practice to return the analyzer to level 0 access (or level 1 if password 1 is set to "000") when you have finished using the analyzer. Do this by selecting [PASS] from the main menu, then pressing *Enter* with [0000] displayed.

Passwords—A Quick Tour

Assuming that password 1 is defined and we are at access level 0, try changing the output 1 low setting. Select [out] [out1] [LO] from the menu. The current value will display. Press *Enter* to go into edit mode. The analyzer will display [PASS] for 2 seconds because we need to enter a password first. Level 1 security is needed to change this setting.

Select [PASS] from the main. Change the displayed value to the level 1 password, then press *Enter*. The analyzer will display [good], followed by [ACC.1], indicating that the password is valid and that we now have level 1 access.

Try changing the output 1 low setting again. You will find that this time we can go into edit mode unhindered.

Before walking away from the analyzer, we should disable level 1 access to prevent unauthorized users from using the analyzer. Select [PASS] from the menu again, then press *Enter* with [0000] displayed. The analyzer will display [ACC.0] indicating that we have returned to the lowest access level.

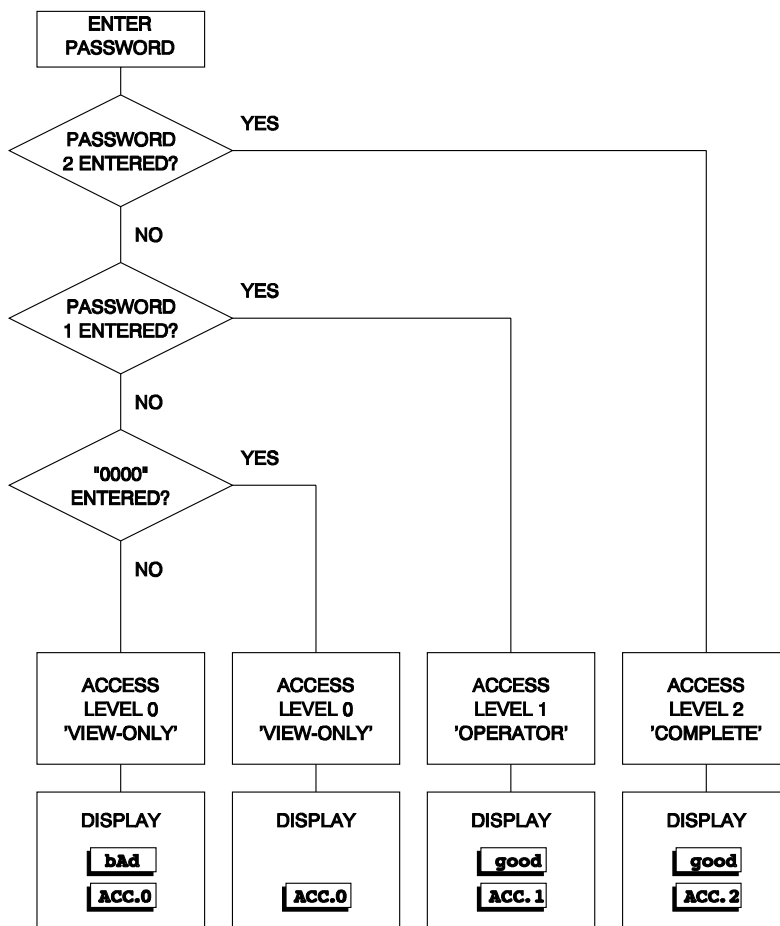


Figure 29 Password validation

INSTRUMENT MAINTENANCE

The dissolved oxygen sensors provided by IC CONTROLS are designed for simple maintenance. The sensors are robust and will withstand difficult applications when properly applied and maintained. Follow instructions in this section to promote proper operation.

Table 1 Recommended Maintenance Schedule

Frequency	Operation
Weekly	Check flow rate Visual inspection
Monthly	Inspection of sensor calibration
Yearly	Replace Membrane Module Replace Electrolyte

Weekly Visual Check

1. Remove sensor from flowcell and check for clean internals and smooth membrane.
2. Inspect flowcell and sample lines for leakage.
3. Check that there are no error indications and displayed concentration is reasonable.

Monthly Calibration Check

Certain applications may require occasional sensor cleaning.

1. Do a visual examination of the sensor cell area. If needed a soft wipe can be used to blot, plus detergent and water to remove any deposits.
2. After cleaning, rinse the sensor cell area thoroughly with demineralized water.
3. Perform a calibration and return analyzer to service. Refer to the **CALIBRATION** section for step-by-step instructions.
4. Black or red discoloration inside the sensor cap may cause problems. If after calibration the electrode response is slow, replace the electrolyte and wipe the coils lightly using a soft wipe to try and remove the deposits. Recharge with fresh electrolyte.

Black or red discoloration may be accompanied by very slow response that does not go away with standard maintenance. Refer to the TROUBLESHOOTING section.

5. Place the electrode back into sample and run one hour prior to calibration. If the response time is still slow, the membrane module may need replacement. Follow **Yearly Maintenance** procedure. Use of an inlet filter upstream of sensor will prolong membrane life.
6. Calibrate and return the sensor to service.

Yearly Maintenance

Replacement of Membrane Module and Electrolyte

1. Unscrew the electrode cap and dump the contents.
2. Flush the cell internals with demineralized water and rinse with electrolyte.
3. Examine the lead coils for black or red discoloration or heavy grey coating. Such coatings should be removed for best performance, (caution the lead coils are soft metal, never use force in cleaning).
4. Clean light fouling by wiping in the direction of the coils, until a shine appears. Heavier foulings may come off with a toothbrush, worked along the coils so the bristles get down in the cracks, followed by rinse and wiping to achieve a dull shine.
5. Remove the old membrane module from the cell and replace with a new one. Follow procedure under "Assembly of DO Sensor." Place electrode back into sample and run at least one hour prior to calibration.
6. Calibrate, and place in service.

Cleaning the 869 housing

1. For light dust, use demin water on a lint-free wiper, wipe LCD window first, then other areas of the enclosure.
2. For heavy dirt, use methyl hydrate on a lint-free wiper, wipe LCD window first, then other parts of the enclosure.

Assembly of the Dissolved Oxygen Sensor

This procedure should be done over a sink.

Warning: The electrolyte solution is caustic. Wear thin plastic or rubber gloves. Wash hands thoroughly with lots of water if the electrolyte comes in contact with the skin. Rinse until the slippery feel of the caustic disappears.

1. Remove the protective cap exposing the coils and silver tip. Inspect the electrode to ensure the coils are clean and the silver electrodes are bright and not tarnished. If tarnished, wipe with a lint-free wiper.
2. Install a membrane module in the cap with the membrane facing down so that it covers the center hole in the cap.
3. Flush the coils of the electrode with electrolyte solution. Then holding the electrode cap with membrane module installed, in an upright position, fill with electrolyte until the center cavity is full. Tilt at about 60° and add an extra 1/8 inch of electrolyte, observing that the crack around the membrane module fills with electrolyte.
4. Hold the cap like a cup, and slowly lower the electrode coils vertically down into the cap until the threads touch. Rotate the sensor body until you can see the flat area through the threads.

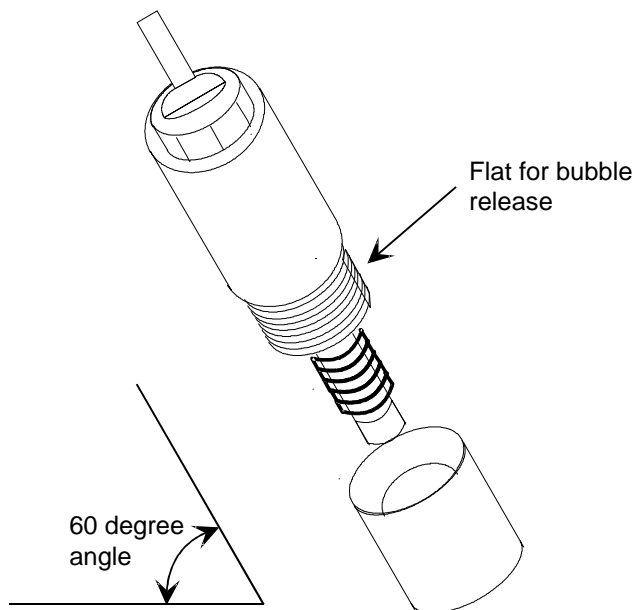


Figure 30 D.O. cell assembly

Slowly rotate the cap on, allowing the excess electrolyte and bubbles to overflow up the flat area. Continue to slowly rotate the cap until a firm stop is reached.

Warning: Do not force the cap beyond the stop. The parts are plastic and may break.

5. Dry the sensor and blot the tip. Examine the tip—the membrane should be smooth with no wrinkles or cuts and the surface contours of the silver electrode should be clear. There should be no lines from trapped bubbles between the membrane and the silver electrode. If there are no visible problems as described here, then the sensor is ready to be put into service.

Re-Inserting the Sensor into the Flowcell

Refer to the step-by-step instructions in the *CALIBRATION* section.

Recommended Supplies

Table 2 Recommended Supplies

Cat. No.	Item
A2103013	Fill Solution Kit contains Fast Response membrane module, O-ring, and electrode internal fill solution.
A1100193	Zero dissolved oxygen standard
A1100192	Deionized water rinse solution
A2103009	Replacement dissolved oxygen electrode for A2103010 CPVC flowcell

TROUBLESHOOTING

The following section covers troubleshooting that can be performed, mostly without special tools or skills.

In Canada and the U.S., IC CONTROLS service personnel can be consulted for troubleshooting advice at 1-800-265-9161 or call 519-941-8161. In other countries contact your IC CONTROLS national distributor.

Error Messages and Codes

To display errors detected by the analyzer, press the *error* button or select [Err] from the main menu. If there are no error messages, [NONE] will be displayed; otherwise scroll through the error list using the *Up* and *Down* arrow keys

Refer to the INSTRUMENT OPERATION, “*Error Messages*” section for further information on error messages and codes.

Error Messages for Dissolved Oxygen

Error	Description	Causes	Remedy
+ Err	Reading off scale.	Dissolved oxygen is beyond measuring capability of range.	Switch to automatic range switching or select higher range in [CONF] [in] [d.o.] [rANG].
			New sensor needed or analyzer needs electronic range adjustment. Contact Service Department.
0.00	No dissolved oxygen measurement.	Sensor reading is below measuring capability of analyzer.	Open circuit— sensor not connected.
		Open circuit.	Manual range switching in effect and analyzer needs to be on lower range. Sensor not connected or bad connection.
E1.1	Electrode has not stabilized after 5 minutes of calibration	Poor electrode performance; sample is not stable; interference.	Check electrode and setup until stable reading is achieved, then redo calibration
E1.2	Electrode efficiency would be more than 500 %. Previous setting retained.	Improper electrode setup assembly, or electrode failure.	Recharge and re-assemble the electrode, setup up electrode again, then redo calibration. Also refer to TROUBLESHOOTING section.
		Rip or puncture in membrane.	Replace membrane module.
E1.3	Sensor efficiency would be less than 33%. Previous setting retained.	No D.O. signal, or sensor signal is very weak.	Check electrode connection, then redo calibration.
		Wrong membrane module in use—membrane is too thick.	Replace membrane module.
		Black or red coloring in sensor.	Sensor needs service—has seen long exposure to high D.O. Refer to <i>Dissolved Oxygen Troubleshooting</i> in the TROUBLESHOOTING section.
		Manual range switching in effect and analyzer is on low range.	Change to automatic range switching or change range to range 4.

E1.4	Pressure compensator is off-scale.	Process outside of pressure operating range of 75 to 130 kPa	Use manual pressure compensation or refer to error messages for pressure input.
E1.5	Temperature compensator is off-scale.	Process outside of TC operating range of -5°C to 105°C	Use manual temperature compensation or refer to error messages for temperature input.
		TC not connected.	Check TC connections or install TC.
CA 1.7	Display shows +Err, reading is too high for display.	Dissolved oxygen displayed using ppb units and dissolved oxygen > 9999 ppb.	Display dissolved oxygen using ppm units. Select [d.o.] [unit] from the menu, then set to [1E-6] to display ppm dissolved oxygen.

Error Messages for Temperature

Error	Description	Causes	Remedy
E2.1, - Err	Temperature reading off-scale. Temperature less than -5°C.	Temperature less than -5°C.	Verify process and sensor location.
		Electronic calibration necessary.	Follow procedure in APPENDIX G, Electronic Hardware section.
E2.2, + Err	Temperature reading off-scale. Temperature greater than 105°C.	Temperature compensator not attached.	Attach temperature compensator.
			Turn off temperature input. Follow <i>Input On/Off Switch</i> procedure in INSTRUMENT OPERATION section.
			Connect resistor to TC terminals to simulate a constant temperature. Refer to APPENDIX G, Electronic Hardware section
		Temperature greater than 105°C.	Verify process and sensor location.
		Electronic calibration necessary.	Follow procedure in APPENDIX G, Electronic Hardware section.

Error Messages for Pressure

Error	Description	Causes	Remedy
E3.1, - Err	Pressure reading off-scale. Pressure less than 75 kPa.	Pressure less than 75 kPa.	Turn off pressure input. Follow <i>Input On/Off Switch</i> procedure in INSTRUMENT OPERATION section. Use <i>manual pressure compensation</i> .
		Electronic calibration necessary.	Follow procedure in APPENDIX G, Electronic Hardware section.

E3.2, + Err	Pressure reading off-scale. Pressure greater than 130 kPa.	Pressure greater than 130 kPa.	Turn off pressure input. Follow <i>Input On/Off Switch</i> procedure in INSTRUMENT OPERATION section. Use <i>manual pressure compensation</i> .
		Electronic calibration necessary.	Follow procedure in APPENDIX G, Electronic Hardware section.

Error Messages for Battery

Error	Description	Causes	Remedy
Bat E9.1	Battery low. Analyzer run-time is limited and analyzer may no longer perform to published specifications.	Batteries are almost spent.	Replace the two 9 V NI-CAD batteries. If NI-CAD's are not available, switch SW2 to alkaline position and use Alkaline 9 V instrument batteries.
			Use the AC power adapter.

Dissolved Oxygen Tips

Slow Response — typically due to excessive sample line length and low flow, thus producing long sample transport lags. Resolve by adding a fast-flow loop with the sensor in a short side stream, or by shortening the line. Slow response can also be caused by a buildup of dirt in the sample line. In this case the problem may be alleviated by changing the take-off point or by installing a knock-out pot or sintered stainless steel filter. Consult IC CONTROLS for specific solutions.

Readings drop fast after calibration but hang up well above expected level, then fall slowly — typically due to an air bubble trapped in the sample system. See tip for clearing air bubble, below.

Readings go high or off scale and won't come down. Also the efficiency goes high — typically the signature of a pinhole or rip in the membrane. Replace the membrane module with a new one.

Readings consistently low or spike low — characteristic of wiring problems between the analyzer and the sensor, an open circuit in the field wiring will result in zero cell current and a reading less than 1 ppb. Review the installation instructions in the INSTRUMENT PREPARATION section.

Readings gradually falling — the analyzer can no longer be calibrated properly. This problem is typical of sludge/slime deposits on the sensor face. The sensor will need to be cleaned. Refer to the yearly maintenance procedure in the INSTRUMENT MAINTENANCE section.

Black or red color in D.O. sensor — not necessarily a problem, especially when seen as orange. Caused by long use or long exposure to air, producing red lead oxide. May go away gradually if left running in a low ppb D.O. sample for several days and the speed of response will improve as well.

- Correct by disassembling the cell and wiping away deposits using a rag or using a toothbrush.
- If cell response remains slow, chemically clean and restore using IC CONTROLS P/N A1100194 *Dissolved Oxygen Sensor Renew Solution*. Replace the membrane module and return to service.

Readings trend where expected but spike high — This problem is typical of air bubbles in the sample line. If a bubble hangs up in the D.O. flow cell, you may see a high surge that slowly falls over some hours. Correct by finding air in-leakage point and stopping leak.

TIP: How to clear an air bubble

You can clear an air bubble stuck in the flow cell by loosening the cell retaining nut, and letting the cell rise up a bit, then pressing it back in until it bottoms.

Another way to clear an air bubble is to temporarily increase the sample flow.

DO Sensor Chemical Cleaning

Recover of failing DO. sensors can sometimes be achieved with p/n A1100194, DO. sensor cleaning solution.

This procedure should be done over a sink. Wear plastic or rubber gloves as the solution is acidic. Wash hands thoroughly with lots of water if the solution comes in contact with the skin.

1. Remove the protective cap exposing the coils and gold tip.
2. Immerse in cleaning solution as shown (Figure 31) for 5 to 10 minutes, or until deposits disappear.
3. Remove and rinse in Distilled or Demin water, use wiping or toothbrush to speed removal.
4. Repeat 2 & 3 until coils and tip look clean and have a grey shine, then re-assemble DO. sensor with new membrane and fill solution, calibrate and check efficiency is above 50 percent.
5. Repeat 2 to 4 as necessary to get at least 50 percent efficiency. If not possible DO. sensor should be replaced.

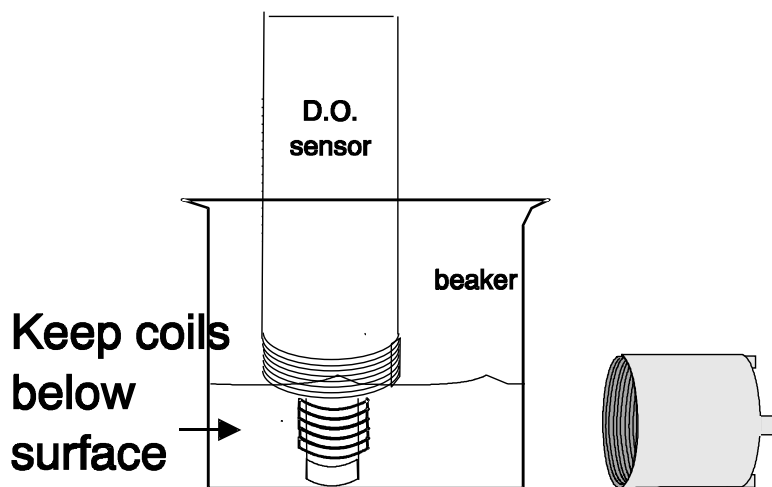


Figure 31 Chemical clean

REPAIR AND SERVICE

Field Service is dispatched in Canada from the home office of IC CONTROLS. In North America, call 1-800-265-9161, or call 519-941-8161. Outside of North America consult your authorized IC CONTROLS distributor, or:

IC CONTROLS Ltd.
29 Centennial Road
Orangeville, Ontario
CANADA

FAX 519-941-8161

email: service@iccontrols.com

NOTICE OF COMPLIANCE

This meter may generate radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type-tested and found to comply with the limits for a Class A computing device in accordance with specifications in Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in an industrial installation. However, there is no guarantee that interference will not occur in a particular installation. If the meter does cause interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna,
- Relocate the meter with respect to the receiver
- Move the meter away from the receiver
- Plug the meter into a different outlet so that the meter and receiver are on different branch circuits

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402

Stock No. 004-000-00345-4.

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

"Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques (de la class A) prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada."



29 Centennial Road, Orangeville, Ontario, L9W 1R1 Canada

Head Office, Manufacturing & Research

Tel: (519) 941-8161 Fax: (519) 941-8164

INDUSTRIAL PRODUCTS WARRANTY

Industrial instruments are warranted to be free from defects in material and workmanship for a period of twelve (12) months from the date of installation or eighteen (18) months from the date of shipment from IC CONTROLS whichever is earlier, when used under normal operating conditions and in accordance with the operating limitations and maintenance procedures in the instruction manual, and when not having been subjected to accident, alteration, misuse, or abuse. This warranty is also conditioned upon calibration and consumable items (electrodes and all solutions) being stored at temperatures between 5°C and 45°C (40°F and 110°F) in a non-corrosive atmosphere. IC CONTROLS consumables or approved reagents must be used or performance warranty is void. Accessories not manufactured by IC CONTROLS are subject to the manufacturer's warranty terms and conditions.

Limitations and exclusions:

Industrial electrodes, and replacement parts, are warranted to be free from defects in material and workmanship for a period of three (3) months from the date of installation or eighteen (18) months from the date of shipment when used under normal operating conditions and in accordance with the operating limitations and maintenance procedures given in the instruction manual and when not having been subjected to accident, alteration, misuse, abuse, freezing, scale coating, or poisoning ions.

Chemical solutions, standards or buffers carry an "out-of-box" warranty. Should they be unusable when first "out-of-box" contact IC CONTROLS immediately for replacement. To be considered for warranty, the product shall have an RA (Return Authorization) number issued by IC CONTROLS customer service department for identification and shall be shipped prepaid to IC CONTROLS at the above address.

In the event of failure within the warranty period, IC CONTROLS, or its authorized dealer will, at IC CONTROLS option, repair or replace the product non-conforming to the above warranty, or will refund the purchase price of the unit.

The warranty described above is exclusive and in lieu of all other warranties whether statutory, express or implied including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose and all warranties arising from the course of dealing or usage of trade. The buyer's sole and exclusive remedy is for repair, or replacement of the non-conforming product or part thereof, or refund of the purchase price, but in no event shall IC CONTROLS (its contractors and suppliers of any tier) be liable to the buyer or any person for any special, indirect, incidental or consequential damages whether the claims are based in contract, in tort (including negligence) or otherwise with respect to or arising out of the product furnished hereunder.

Representations and warranties made by any person, including its authorized dealers, distributors, representatives, and employees of IC CONTROLS, which are inconsistent or in addition to the terms of this warranty shall not be binding upon IC CONTROLS unless in writing and signed by one of its officers.

APPENDIX A: PARTS LIST

Part No.	Description
	Dissolved Oxygen Analyzer, Model 869 (1 ppb to 10,000 ppb)
869	Low-level dissolved oxygen analyzer Includes electronic housing with large character display, one voltage output, RS232 serial link, oxygen electrode complete with housing and attached 2 ft. shielded cable, maintenance kit (includes membrane module, O-ring, and fill solution), CPVC flow cell, and one instruction manual. Wired for 115/220V, 50/60 Hz, 50 watts.
A2103009	Replacement dissolved oxygen electrode for A2103010 flowcell with attached 2 ft. double shielded cable and fill solution kit which includes membrane module, O-ring and internal fill solution.
A2103013	Fill solution kit includes fast response membrane module, O-ring, and internal fill solution.
A1100192	Deionized water rinse solution for cleaning sensor internals
A1100192-6P	Six-pack of deionized water rinse solution for cleaning sensor internals, six 500 mL bottles.
A1100193	zero dissolved oxygen standard, 500 mL bottle
A1100193-6P	Six-pack of zero dissolved oxygen standard
A1100194	Dissolved oxygen electrode renew solution, 500 mL bottle
A2103102	ppb D.O. terminal program for 869 on 3.5 inch diskette
A2103010	CPVC flowcell assembly
A2103020	Assy CPVC nut and electrode push sleeve for A2103010 flowcell
A2103021	Replacement ppb DO electrode cap for P/N A2103009 DO sensor
A2103022	Flowcell mounting clamp and screws for A2103010 flowcell
A7201490	Stainless steel inlet fittings and O-ring
A9551054	O-ring for inlet fitting
A7201415	Stainless steel Quick Connector Bulkhead fitting
A7211415	Stainless steel Insert Stem for quick connector sample lines
A7221415	Stainless steel Insert Plug for quick connector
A9201030	Serial cable, watertight to DB9, 10 feet
A9201015	Sub assembly inter-board connector
A9051032	Replacement ppb D.O. power board 869, complete
A9051031	Replacement ppb D.O. display board 869, complete
A9141021	Assembly, 869 case with keypad
A9190011	Power supply, UNIVERSAL 95-250 VAC

APPENDIX B: DEFAULT SETTINGS

The following program settings are the default settings for the analyzer. New analyzers will have these settings unless the setup has already been customized for your application.

	Output
Input to be transmitted	D.O.
Low setting	0 ppb
High setting	100 ppb
Units	ppb
ON/OFF switch	ON

Global units

Metric units, Temperature in degrees Celsius, Pressure in kPa.

Security

Not enabled.

Temperature compensation

Automatic TC using temperature input.

Pressure compensation

Automatic pressure compensation using pressure input.

Input on/off configuration

The temperature input is on and will show up in the sample menu.

Serial Communications

On/off switch = OFF, baud rate 1200.

APPENDIX C: SATURATED DO VALUES

The table below lists shows the concentration of dissolved oxygen in water over a range of temperature and pressure. Dissolved oxygen values are reported

as parts per million. During calibration the 869 analyzer uses the table below to determine the efficiency of the cell.

°C/kPa	94	95	96	97	98	99	100	101	101.3	102	103	104	105	106
0	13.51	13.65	13.80	13.94	14.09	14.23	14.37	14.52	14.57	14.67	14.81	14.95	15.10	15.25
1	13.15	13.29	13.43	13.57	13.71	13.85	13.99	14.13	14.17	14.27	14.41	14.56	14.70	14.84
2	12.79	12.93	13.06	13.20	13.34	13.48	13.61	13.75	13.79	13.88	14.02	14.16	14.30	14.43
3	12.46	12.59	12.72	12.86	12.99	13.13	13.26	13.39	13.43	13.52	13.66	13.79	13.93	14.06
4	12.13	12.25	12.38	12.52	12.65	12.77	12.90	13.04	13.08	13.17	13.29	13.42	13.56	13.69
5	11.82	11.95	12.07	12.20	12.33	12.45	12.58	12.71	12.74	12.83	12.96	13.09	13.21	13.34
6	11.52	11.64	11.76	11.89	12.01	12.13	12.25	12.38	12.42	12.50	12.62	12.75	12.87	13.00
7	11.23	11.36	11.48	11.60	11.72	11.84	11.96	12.08	12.11	12.20	12.32	12.44	12.56	12.68
8	10.95	11.07	11.19	11.30	11.42	11.54	11.66	11.77	11.81	11.89	12.01	12.13	12.25	12.37
9	10.69	10.81	10.93	11.04	11.15	11.27	11.39	11.50	11.53	11.61	11.73	11.85	11.96	12.08
10	10.44	10.55	10.66	10.77	10.89	11.00	11.11	11.22	11.26	11.34	11.45	11.56	11.67	11.79
11	10.20	10.31	10.42	10.52	10.64	10.75	10.86	10.96	10.99	11.08	11.19	11.30	11.40	11.52
12	9.96	10.07	10.17	10.28	10.39	10.50	10.60	10.71	10.74	10.82	10.93	11.03	11.14	11.24
13	9.74	9.84	9.95	10.05	10.16	10.26	10.37	10.47	10.50	10.58	10.68	10.79	10.89	11.00
14	9.52	9.62	9.72	9.83	9.93	10.03	10.13	10.24	10.27	10.34	10.44	10.54	10.65	10.75
15	9.31	9.41	9.52	9.62	9.72	9.81	9.92	10.02	10.05	10.12	10.22	10.32	10.42	10.52
16	9.11	9.21	9.31	9.41	9.51	9.60	9.70	9.80	9.83	9.90	10.00	10.10	10.20	10.28
17	8.92	9.02	9.12	9.21	9.31	9.41	9.50	9.60	9.63	9.70	9.79	9.89	9.99	10.08
18	8.74	8.83	8.92	9.02	9.12	9.21	9.30	9.40	9.43	9.50	9.59	9.68	9.78	9.87
19	8.56	8.66	8.75	8.84	8.93	9.03	9.12	9.21	9.24	9.31	9.40	9.49	9.58	9.67
20	8.39	8.48	8.57	8.66	8.75	8.84	8.93	9.03	9.06	9.12	9.21	9.30	9.39	9.47
21	8.23	8.32	8.41	8.50	8.59	8.67	8.76	8.85	8.88	8.95	9.04	9.13	9.21	9.30
22	8.07	8.15	8.24	8.33	8.42	8.51	8.59	8.68	8.71	8.77	8.86	8.95	9.03	9.12
23	7.92	8.00	8.09	8.18	8.26	8.35	8.44	8.52	8.55	8.61	8.70	8.79	8.87	8.96
24	7.77	7.85	7.94	8.02	8.11	8.19	8.28	8.36	8.39	8.45	8.53	8.62	8.70	8.79
25	7.63	7.71	7.80	7.88	7.96	8.04	8.13	8.21	8.24	8.30	8.38	8.47	8.55	8.64
26	7.49	7.57	7.65	7.73	7.82	7.90	7.98	8.06	8.09	8.15	8.23	8.31	8.39	8.48
27	7.36	7.44	7.52	7.60	7.68	7.76	7.84	7.92	7.95	8.01	8.09	8.17	8.25	8.33
28	7.23	7.31	7.38	7.46	7.55	7.63	7.70	7.78	7.81	7.87	7.95	8.02	8.10	8.18
29	7.10	7.18	7.26	7.34	7.42	7.50	7.57	7.65	7.68	7.73	7.81	7.89	7.97	8.05
30	6.98	7.06	7.13	7.21	7.29	7.37	7.44	7.52	7.55	7.60	7.68	7.76	7.84	7.91
31	6.87	6.94	7.02	7.09	7.17	7.25	7.32	7.40	7.42	7.48	7.55	7.63	7.71	7.78
32	6.75	6.83	6.90	6.98	7.05	7.13	7.20	7.28	7.30	7.35	7.43	7.50	7.58	7.65
33	6.64	6.71	6.79	6.86	6.94	7.01	7.09	7.16	7.18	7.23	7.31	7.38	7.46	7.53
34	6.53	6.60	6.67	6.75	6.82	6.90	6.97	7.05	7.07	7.12	7.19	7.26	7.34	7.41
35	6.42	6.49	6.57	6.64	6.71	6.79	6.86	6.93	6.95	7.00	7.07	7.15	7.22	7.30
36	6.32	6.39	6.46	6.53	6.60	6.68	6.75	6.82	6.84	6.89	6.96	7.03	7.11	7.18
37	6.22	6.28	6.36	6.43	6.50	6.57	6.64	6.71	6.73	6.78	6.85	6.92	7.00	7.07
38	6.12	6.18	6.25	6.33	6.40	6.46	6.53	6.61	6.63	6.68	6.74	6.81	6.89	6.95
39	6.02	6.09	6.16	6.23	6.30	6.36	6.43	6.50	6.52	6.57	6.64	6.71	6.78	6.85
40	5.93	5.99	6.06	6.13	6.20	6.26	6.33	6.40	6.42	6.47	6.53	6.60	6.68	6.74
41	5.83	5.90	5.97	6.03	6.10	6.16	6.23	6.30	6.32	6.37	6.43	6.50	6.57	6.64
42	5.74	5.80	5.87	5.94	6.00	6.06	6.13	6.20	6.22	6.27	6.33	6.40	6.47	6.53
43	5.64	5.71	5.78	5.84	5.91	5.97	6.04	6.10	6.13	6.17	6.24	6.30	6.37	6.43
44	5.55	5.61	5.68	5.75	5.82	5.88	5.94	6.01	6.03	6.08	6.14	6.20	6.27	6.33
45	5.46	5.53	5.59	5.66	5.72	5.79	5.85	5.91	5.94	5.98	6.05	6.11	6.17	6.24
46	5.38	5.44	5.50	5.57	5.63	5.69	5.76	5.82	5.84	5.89	5.95	6.01	6.08	6.14
47	5.29	5.35	5.41	5.48	5.54	5.60	5.67	5.73	5.75	5.79	5.86	5.92	5.98	6.05
48	5.20	5.26	5.32	5.39	5.45	5.51	5.57	5.64	5.66	5.70	5.76	5.83	5.89	5.95
49	5.12	5.18	5.24	5.30	5.36	5.42	5.49	5.55	5.57	5.61	5.67	5.74	5.80	5.86
50	5.03	5.09	5.15	5.21	5.27	5.33	5.40	5.46	5.48	5.52	5.58	5.64	5.70	5.77

APPENDIX D: DISPLAY PROMPTS

[1E-6]	Part per million D.O. unit selection in scientific notation.	[HI]	High alarm; high limit for 0 to 1 VDC output window
[5VDC]	Diagnostic to display 0-5 VDC raw input voltage for D.O. input.	[Hold]	Output hold.
[ACC.n]	Access level for security. Displayed after password entered by user.	[iLOG]	Internal data log.
[Auto]	Automatic ranging for D.O. circuit: yes/no switch.	[in]	Input menu or setting.
[bAt.v]	Battery voltage	[kPa]	kPa units for pressure.
[bAud]	Baud rate for serial communications.	[LO]	Low alarm; low limit for 0 to 1 VDC output window.
[°C]	Temperature in degrees Celsius; use metric units.	[OFF]	off.
[CAn.n]	Numbered caution message in error menu.	[OFFS]	Offset.
[dEv]	Deviation alarm.	[on]	on.
[CAL]	Calibrate analyzer.	[ON.OF]	On/off setting.
[CLSd]	Normally closed alarm contact.	[out]	output menu
[CONF]	Configuration of program to match hardware.	[out 1]	first 0 to 1 VDC analog output channel
[cur]	Signal output in mA, or current.	[PAS.1]	Set password 1, operator access.
[d.o.]	Dissolved oxygen input.	[PAS.2]	Set password 2, complete access.
[EFF]	D.O. cell efficiency constant, as % efficiency. Adjusted by calibration.	[PASS]	Enter password to change access level.
[Err]	Error or caution number. Numbered messages 1 through 5 are errors, messages 6 through 9 are cautions.	[Pr.C.]	Pressure compensation setting.
[Er.94]	Startup condition: RAM checksum failed. Some settings may be lost.	[PrES]	Pressure.
[En.n]	Numbered error message in error menu.	[PSI]	PSI units for pressure.
[°F]	Temperature in degrees Fahrenheit ; use imperial units.	[rANG]	Analyzer D.O. input range selection.
[FLt]	Fault alarm	[rES]	Reset calibration settings.
		[rNG.n]	Range number for D.O. measuring circuit.
		[SEr]	Serial communications menu.
		[SE t]	Setpoint; select manual temperature compensation.
		[StbY]	Standby mode for analyzer.
		[t.c.]	Temperature compensation setting.
		[unit]	Unit display or selection.

APPENDIX E: RESETTING COMPUTER

Occasionally it may be desirable to reinitialize all of the program's settings to bring them back to defaults. Executing the initialization procedure will cause the analyzer to reset all the program variables and settings to factory defaults and then proceed with the normal startup display. A listing of factory-default settings is found in *APPENDIX B*.

CAUTION: Do not use the initialization procedure unless you are absolutely sure that you want to restore the analyzer to factory default configuration. All user settings will be lost.

After the analyzer program has been initialized you will need to re-enter the output signal settings, alarm settings, as well as the program configuration if it was different from the factory default settings. For your convenience the analyzer will remember your most recent menu selections.

Select [CONF] [init] [ALL] from the menu. The display will flash [do]. Nothing will happen if at this point you press *Cancel* or one of the escape keys *Sample*, *Cal*, or *Error*. The 869 analyzer will be re-initialized when the user presses *Enter*.

APPENDIX F: UNIT CONVERSION

Dissolved Oxygen Units

ppm = parts per million

ppb = parts per billion

1 ppm = 1000 ppb

1 ppb = 0.001 ppm

- 1 ppm is approximately 1 mg/L. Some variation occurs because the density of water varies slightly with temperature.
- % Saturation is directly related to the temperature and pressure of the system. A given ppb will give a different **%saturation** value depending on the variation in temperature and pressure. See table in appendix C.

Temperature Units

—

—

APPENDIX G: ELECTRONIC ALIGNMENT

Electronic Hardware

Alignment of Dissolved Oxygen Detection Circuit

1. Set up a precision multimeter, Fluke 8051A or equivalent, to read VDC.
2. Use the "D.O.+" sensor connection, TB200-1, and "D.O.-" sensor, TB200-3, as common. See wiring diagram
3. Place analyzer on manual range selection by selecting [CONF] [in] [d.o.] [Auto] from the menu and editing the setting to read [no].
4. Set the d.o. input range to range 4 by selecting [CONF] [in] [d.o.] [rANG] from the menu and editing the setting to read [rNG.4].
5. Set the D.O. efficiency constant to 100% by selecting [d.o.] [EFF] from the menu and editing the value to read 100.0%.
6. Adjust the electronic standardize with blue trimpot VR200, located mid-board above the D.O. terminal block. Adjust the trimpot to a reading of 2.50V at TP201 while inputting 0.120 VDC through a 10K 1% resistor. 0.120 VDC simulates 8240 ppb D.O. at approx 100 % efficiency under above conditions.
7. Return analyzer to automatic range selection by selecting [CONF] [in] [d.o.] [Auto] from the menu and editing the setting to read [YES].

Alignment of Temperature Input Circuit

The temperature input can be adjusted both by making electronic adjustments and/or by having the program compensate for differences in offset.

Adjusting Electronic Calibration

1. Remove any offset calculated by a previous software calibration of the temperature input. Select [CONF] [in] [°C] [OFFS] from the menu and edit the offset to read 0.0.

2. Set up a precision multimeter, Fluke 8051A or equivalent, to read VDC.
3. Use the "- TEMP" sensor connection, TB201-2, as common. See wiring diagram. Place a 100 ohm 1 % resistor across T+ and T- . Adjust blue trimpot VR201, located top left of board, for a reading of 0.200 V at TP202. Refer to wiring diagram for component locations.
4. Place a 138.5 ohm 1 % resistor across T+ and T- . Adjust blue trimpot VR202, located top left of board, for a reading of 4.85 V at TP202. Refer to wiring diagram for component locations.
5. Close case and press *Sample* key followed by the *Down* key to display the temperature reading.
6. Re-insert the 100 ohm 1 % resistor and adjust as in step 3 until the display reads 0.0 ± 0.1 °C.
7. Re-insert the 138.5 ohm 1 % resistor and adjust as in step 4 above until the display reads 100.0 ± 0.1 °C.

Software Calibration

To do a software calibration of the temperature input, the correct temperature needs to be known.

1. Select [CONF] [in] [°C] [CAL] from the menu. The actual temperature as measured by the temperature sensor will be shown. Edit the displayed value to the known, correct temperature. Press **ENTER** to leave edit mode, then **SELECT→** to start the calibration.
2. The current temperature will be shown using a flashing display. When it looks like the input is stable, press **ENTER** to set the new temperature. The software offset for the temperature input will be adjusted automatically.
3. The calculated offset in degrees Celsius can be viewed by selecting [CONF] [in] [°C] [OFFS] from the menu. Whenever the hardware alignment is 'correct', the offset will be 0.0. The displayed offset can be edited.

Alignment of Pressure Input Circuit

The pressure input can be adjusted both by making electronic adjustments and/or by having the program compensate for differences in offset. Both procedures are described below.

Adjusting Electronic Calibration

1. Obtain the current barometric pressure from your local weather station or from a barometer.
2. Remove any offset calculated by a previous software calibration of the pressure input. Select [CONF] [in] [PrES] [OFFS] from the menu and edit the offset to read 0.0.
3. Set up a precision multimeter, Fluke 8051A or equivalent, to read VDC.
4. Use the "TEMP-" sensor connection, TB201-2, as common. See wiring diagram. Adjust blue trimpot VR203, located at top of board, for a reading of 2.50 V at TP204. Refer to wiring diagram for component locations.
5. Close the case and press the **SAMPLE** key followed by two down arrow keys to display the pressure reading. Reading should be within 0.1 kPa of the pressure obtained in step 1.

Software Calibration

1. Obtain the current barometric pressure from your local weather station or from a barometer.
2. Select [CONF] [in] [PrES] [CAL] from the menu. The actual pressure as measured by the pressure sensor will be shown. Edit the displayed value to the known, correct pressure. Press **ENTER** to leave edit mode, then **SELECT→** to start the calibration.
3. The current pressure will be shown using a flashing display. When it looks like the input is stable, press **ENTER** to set the new pressure. The software offset for the pressure input will be adjusted automatically.
4. The calculated offset in kPa can be viewed by selecting [CONF] [in] [PrES] [OFFS] from the menu.

Calibration of Output.

Use one of the following two approaches to get the analyzer to output the desired voltage level, and then make electronic adjustments to calibrate the output.

Approach 1: Simulated 0-1 V Output (Self Calibration)

1. Select [VDC] from the output 1 menu to display the present output in V for [0-1] or in mV for [0-0.1] configuration. The display will be updated as the output changes based on the input signal and the program settings.
2. To simulate a different 0-1 V output signal, press **ENTER** to enter edit mode. Use the arrow keys to display the desired output needed for testing the output signal. Press **ENTER** to select the displayed value. The output signal will be adjusted to put out the desired current. This process can be repeated as often as necessary to output different signal levels.
3. The output signal is held at the displayed level until the program leaves this menu selection. Make calibration adjustments while the analyzer shows the output at 1.00 V.

Approach 2: Use Voltage Source to Adjust Input

This faster calibration approach requires a voltage source for the input.


1. To calibrate the output, set [in] = [°C], Input a low enough signal to cause analyzer to indicate [- Err]; the analyzer will output 0.00 V. Reverse the polarity or input a high enough signal to cause the analyzer to indicate [+ Err]; analyzer will output 1.00 V.

Adjusting 0 to 1 V Electronic Calibration


1. The voltage output is factory set and should not require calibration. However the circuit does allow the user to zero the output.
2. Place voltmeter terminals across TB303, black to V O/P + and Red to V O/P -.
3. Change analyzer output to 0.00 using [OUT] -> [VDC] -> 0.25 in output VDC frame.
4. Adjust VR 300 for a 0.00 Volt reading.
5. Since the analyzer has a fixed span controlled by the micro processor, no adjustment is necessary.

APPENDIX H DRAWINGS

Wiring Diagram

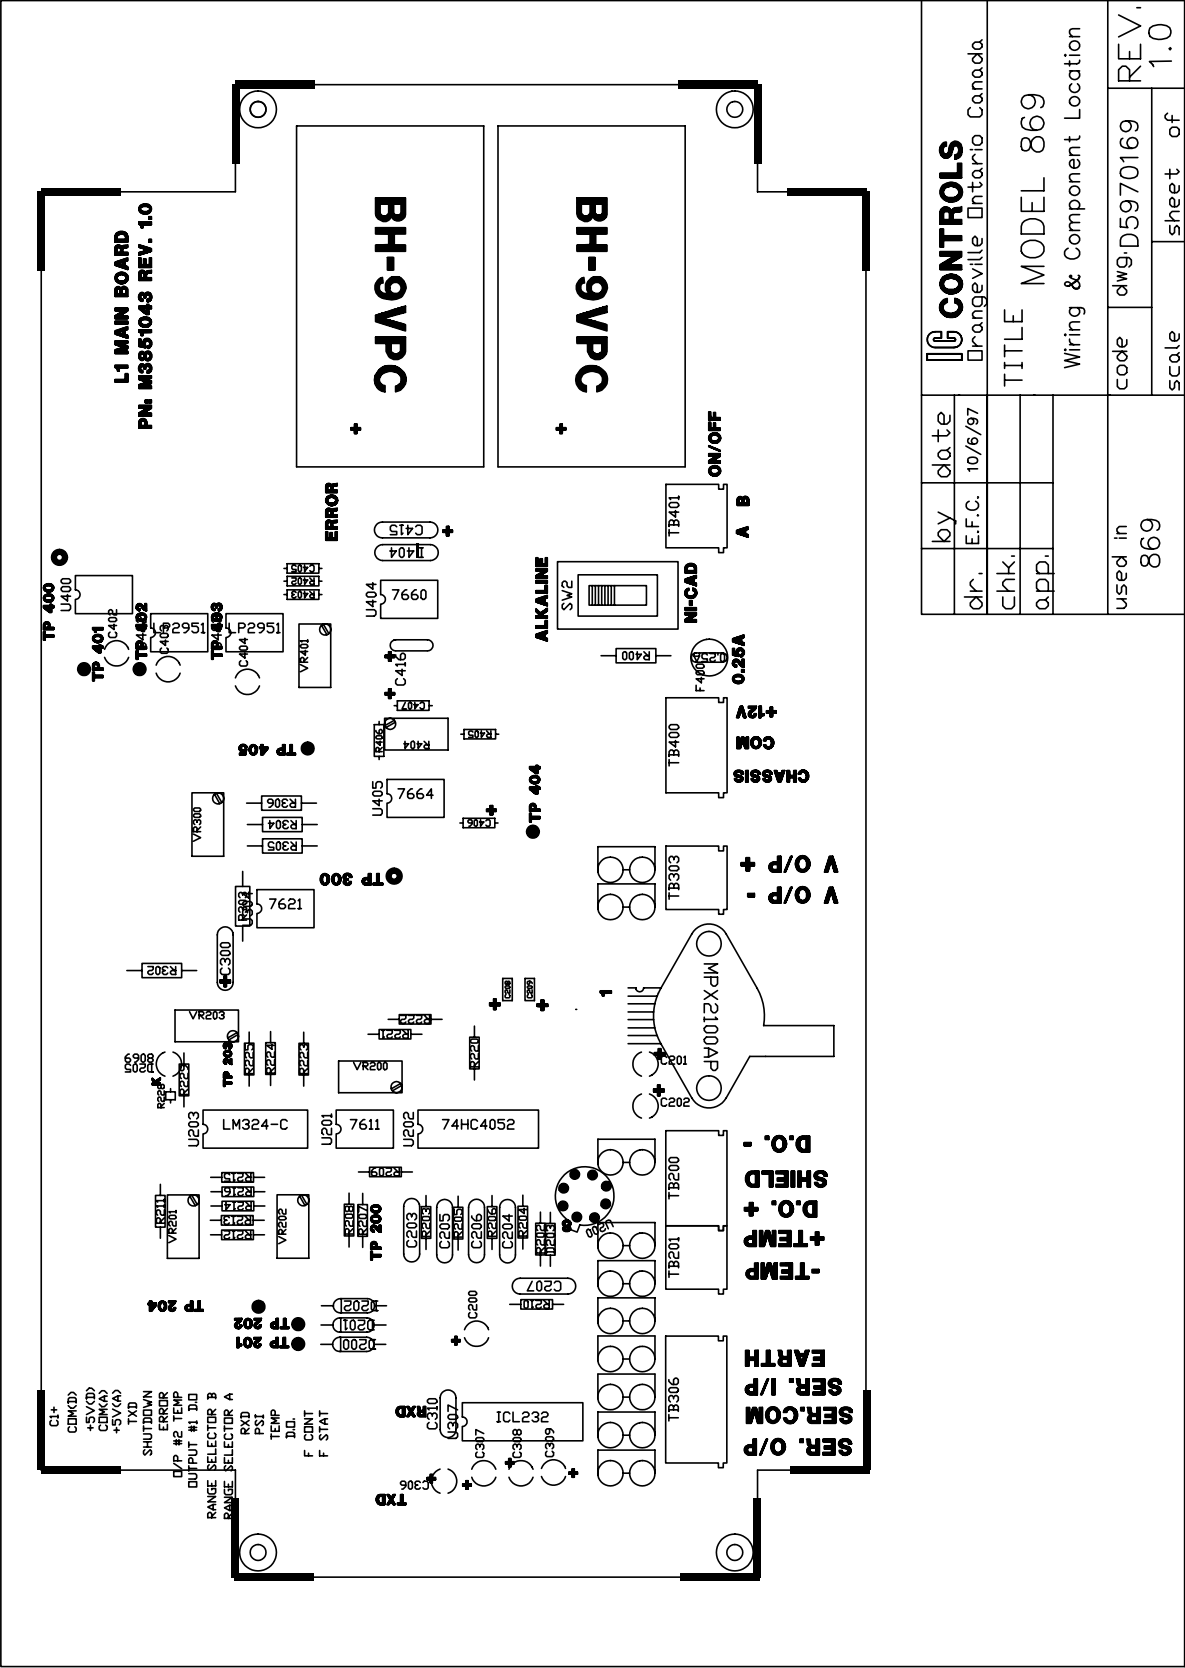

Mounting Dimensions

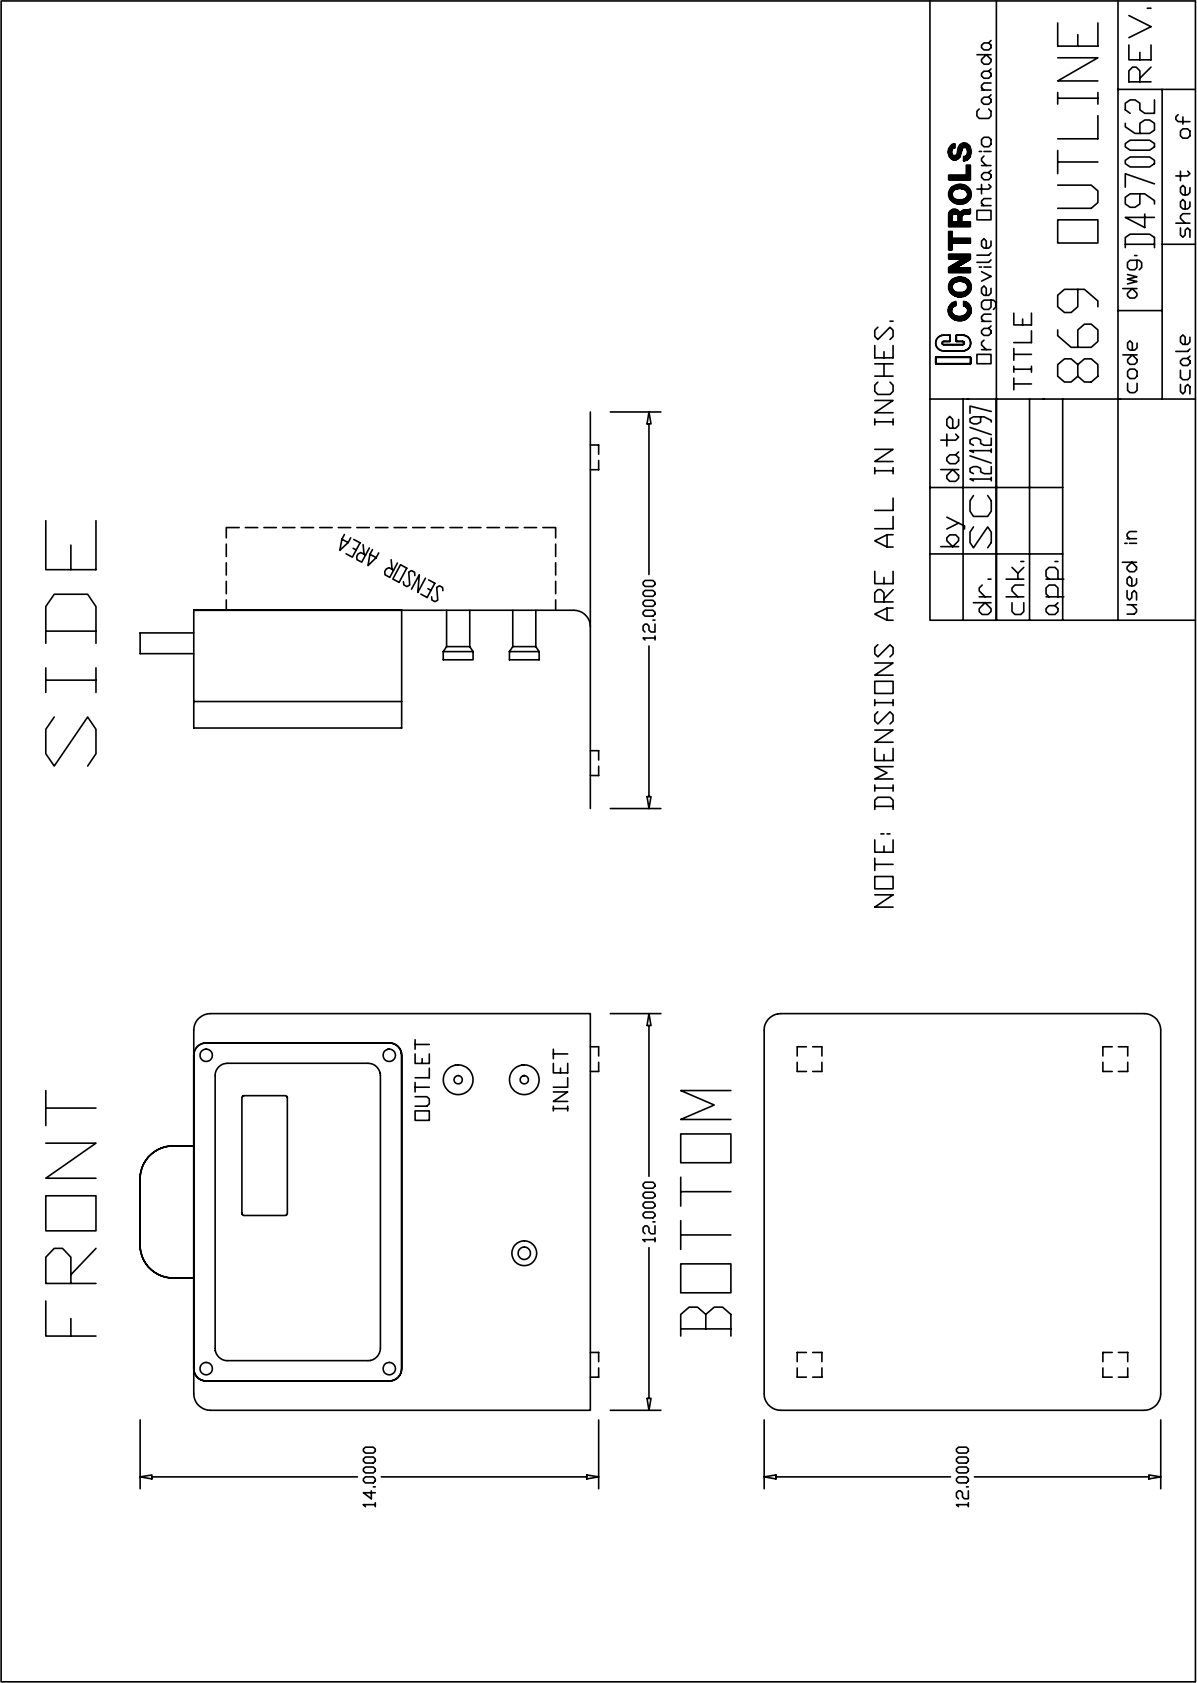

APPENDIX I: SPECIFICATIONS

Measuring Range

1 to 10,000 ppb Dissolved Oxygen

Display

Four and one half LCD digits for concentration, temperature, pressure, efficiency, error codes, prompts and diagnostic information.

Signal Outputs

continuous assignable programmable 0 to 1 VDC.

RS-232 Bidirectional Serial Data Port

Accuracy

Standard deviation $\pm 2\%$ of reading or ± 1 ppb, whichever is greater.

Precision

Standard deviation $\pm 2\%$ of reading or ± 1 ppb, whichever is greater.

Sample Conditions

Temperature: 2 to 45°C (35 to 113°F)

Sample flow: 50 mL/min minimum, 200 mL/min maximum

Pressure: less than 400 kPa (60 PSIG, 4 Bar)

pH: greater than 4

Response Time

90% within 2 minutes, function of flow

Sample Inlet

1/4" tube Quick Connector fitting

Sample Outlet

1/4" tube Quick Connector fitting

Calibration

In water vapour saturated air / monthly

Environment

Temperature: 5 to 45°C

Humidity: 95% relative max, non-condensing; splash-proof IP65

Dimensions , Monitor

30.5 x 35.5 x 30.5 cm (w, h, d)

12 x 14 x 12 in (w, h, d)

Weight

19.8 lbs/9 kg

Shipping Weight

22 lbs/10 kg

Electrical Requirements

Two (2) only 9 VDC batteries

AC power adaptor for 115/230 VAC 10%, 50/60 Hz, 50 Watts 0.5 Amp single phase

Specifications subject to change without notice.

INDEX

+Err	11, 14, 36 - 38	D.O. sensor	on/off switch	12, 14
-Err	14, 37	SEE Electrode	Installation	47
869 analyzer		Default settings	flowcell mounting	6
description	5 - 7	Diagnostics	sensor	7
maintenance	34	memory test	wiring	6
ordering information	43	startup procedure	Keypad	8
parts list	43	Edit mode	arrow keys	12
specifications	53	change settings	kPa	13
warranty	42	key functions	SEE ALSO Units	
Air bubbles	38	numeric values	LED	8
Automatic temperature compensation		Efficiency constant	Maintenance	34
selecting	30	Electrode	monthly	34
Barometric pressure	30	3-electrode design	weekly	34
Battery	15	assembly	yearly	34
Cal key	8, 28	maintenance	Manual pressure compensation	
Calibration	34, 45	Electronic alignment	setpoint	30
D.O.	4, 28	Enter key	Manual temperature compensation	
output hold	28 - 29	Error codes	selecting	30
principle s	4	+Err	setpoint	30
pressure input circuit	50	CA 1.7	Membrane module	35
temperature input circuit	49	E 1.1	Memory test	11
troubleshooting	38	E 1.2	Menu	11
zero oxygen standard	29	E 1.3	adaptive	12, 14
Caution messages	14	E 1.4	edit settings	12
SEE ALSO Error codes		E 1.5	home base	11
Celsius	13	E 2.1	layout	11
SEE ALSO Units		E 2.2	Metric units	11, 13
Configuration	47	E 3.1	Mounting dimensions	52
defaults	47	E 3.2	Ordering information	43
input on/off switch	13	E 9.1	Output	
Program	47	error key	reversing	16
units	13	meaning of	settings	16
D.O.		Error key	span	16
applications	3	Excel spreadsheet	wiring	16
calibration	4, 28, 45	Fahrenheit	Output hold	28 - 29
introduction	3	SEE ALSO Units	timeout	11
measuring circuit	31, 49	Flowcell	Outputs	
output	16	mounting	default settings	44
output hold	28 - 29	Front panel	output hold	29
pressure compensation	45	Galvanic cell	set-up	11
principles of measurement	3	Home base	simulated	17
sample requirements	4	Imperial units	standby mode	15
temperature compensation	45	Input	units	17

Parts	43	Sensor		Troubleshooting	36 - 39
recommended supplies	35	maintenance	34	black or red discoloration	36, 38
Password	32	removal	28	response	38
entering	33	troubleshooting	38	spikes	38
Pressure	38, 45, 50	wiring	6	Units	17, 48
measuring circuit	50	Serial communication		Celsius	13
units	13, 17	data formats	18	conversion	48
Pressure compensation	28, 30, 45	default settings	44	default settings	44
selecting type	30	enabling	18	Fahrenheit	13
setting	30	Service	36, 40	kPa	13
Principles of Calibration	4	maintenance	34 - 35	metric or imperial	11, 13
Principles of measurement	3	parts	43	ppb	3, 48
Prompts	46	recommended supplies	35	ppm	48
PSI	13	troubleshooting	50	pressure	13
SEE ALSO Units		troubleshooting	36 - 39, 49 - 50	PSI	13
Quattro Pro spreadsheet	20	Shutdown	15	temperature	13
Range switching		Simulated current output	17	Version	11
D.O. measuring circuit	31, 49	Specifications	53	Voltage output	
Repair and service	40	Standby mode	15	displaying	50
Resetting computer	47	Start-up	15	simulating	50
RS232	18	diagnostics	11	Warranty	42
Sample key	8, 11 - 12, 28	initial startup	11	Windows	
Sample menu	11	Program Initialization	47	Hyperterminal	19
Sample requirements	4	Temperatu re		terminal program	19
Security	32	units	13	Wiring	6
access level	32 - 33	Temperature	45, 49	output	16
disabling	32	measuring circuit	49	power	6
enabling	32	output	16	sensor	6
password	32	units	17	serial communications	18
password 1	32	Temperature compensation	28, 30, 45	wiring diagram	51
password 2	32	selecting type	30	Zero oxygen standard	29
set-up	11	Timer		Zero test technique	29
standby mode	15	15 minute timeout	11		
timeout	11	output hold timeout	11		
		security timeout	11		